

S175

S185

TURBO

 
INCLUDES HIGH FLOW



Bobcat®

Service Manual

S/N 517625001 & Above
S/N 518115001 & Above
S/N 519028001 & Above
S/N 519215001 & Above

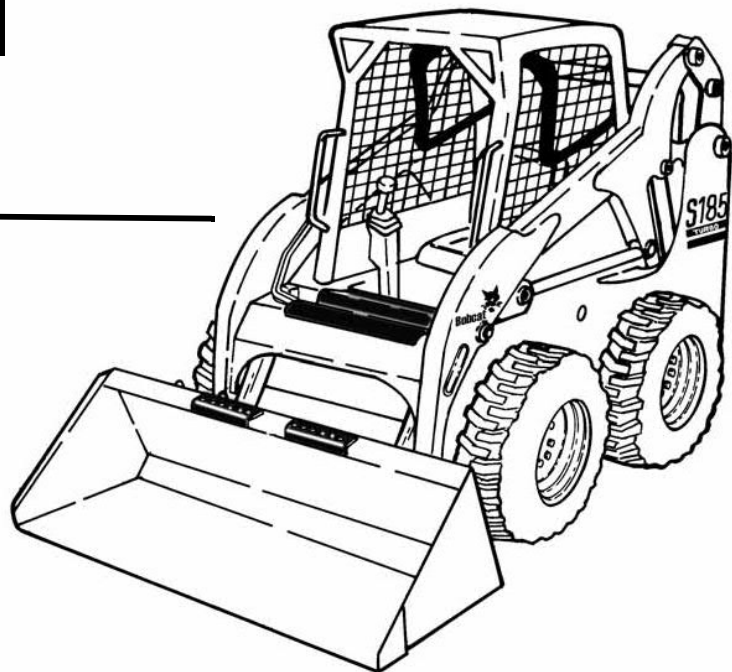

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)

6901828 (3-06)

IR Ingersoll Rand
Compact Vehicle Technologies
Printed in U.S.A.

© Bobcat Company 2006

MAINTENANCE SAFETY



WARNING

 
Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


CORRECT

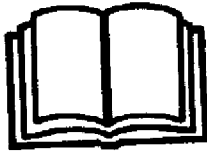

B-10731a

- Never service the Bobcat Skid-Steer Loader without instructions.

 CORRECT

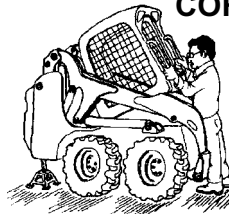

B-15535

- Use the correct procedure to lift or lower operator cab.

 
CORRECT



B-15524

- Cleaning and maintenance are required daily.


WRONG

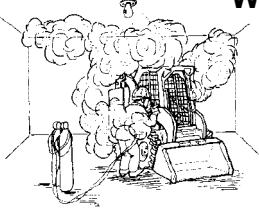

B-15734

- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

 
WRONG

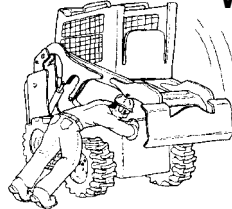

B-15732

- Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace if damaged.

 
WRONG

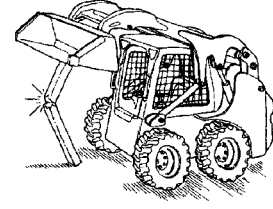

B-15525

- Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

 
WRONG

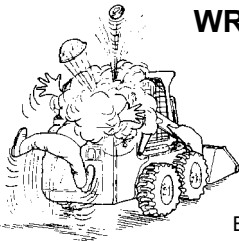

B-15733

- Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

 WRONG

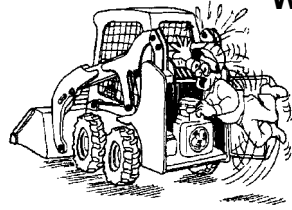

B-15523

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.

WRONG



B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW07-0805

ALPHABETICAL INDEX

ADVANCED CONTROL SYSTEM (ACS)	60-01	HEATER COIL	80-01-0
AIR CLEANER	70-01	HEATER VALVE	80-01
AIR CLEANER SERVICE	10-01	HEATER/AC FAN	80-01
AIR CONDITIONING SERVICE	80-01	HYDRAULIC CONNECTION SPECS	SPEC-01
AIR CONDITIONING SYSTEM FLOW	80-01	HYDRAULIC CONTROL VALVE	20-01
ALTERNATOR	60-01	HYDRAULIC FILTER HOUSING	20-01
BASIC TROUBLESHOOTING	80-01	HYDRAULIC FLUID RESERVOIR	20-01
BATTERY	60-01	HYDRAULIC/HYDROSTATIC	
BOBCAT CONTROLLER	60-01	FLUID SPECIFICATIONS	SPEC-01
BOBCAT INTERLOCK		HYDRAULIC/HYDROSTATIC SYSTEM	10-01
CONTROL SYSTEM (BICS™)	60-01	HYDRAULIC PUMP	20-01
BOB-TACH	10-01, 50-01	HYDRAULIC SYSTEM INFORMATION	20-01
BRAKE	40-01	HYDROSTATIC MOTOR	30-01
BUCKET POSITION VALVE	20-01	HYDROSTATIC PUMP	30-01
		HYDROSTATIC SYSTEM INFORMATION	30-01
CHAINCASE	40-01		
CHARGE PRESSURE	30-01	INSTRUMENT PANEL	60-01
COMPONENTS	80-01		
COMPRESSOR	80-01	LIFT ARM	50-01
CONDENSER	80-01	LIFT ARM BY-PASS CONTROL VALVE	20-01
CONTROL HANDLE	50-01	LIFT ARM SUPPORT DEVICE	10-01
CONTROL PANEL	50-01	LIFTING AND BLOCKING THE LOADER	10-01
CONTROL PEDALS	50-01	LIGHTS	60-01
CONVERSIONS	SPEC-01	LOADER SPECIFICATIONS	SPEC-01
COOLING FAN	70-01	LOADER TORQUES	SPEC-01
CYLINDER (LIFT)	20-01	LUBRICATION OF THE BOBCAT LOADER	10-01
CYLINDER (POWER BOB-TACH)	20-01		
CYLINDER (TILT)	20-01	MAIN RELIEF VALVE	20-01
		MUFFLER	70-01
DECIMAL & MILLIMETER EQUIVALENTS	SPEC-01		
DIAGNOSTICS	60-01	OIL COOLER	30-01
DRIVE BELT	30-01	OPERATOR CAB	10-01, 50-01
DRIVE COMPONENTS	40-01	OPERATOR SEAT	50-01
		OPERATOR SEAT (SUSPENSION)	50-01
ELECTRICAL/HYD. CONTROLS REF	60-01		
ELECTRICAL SYSTEM INFORMATION	60-01	POWER BOB-TACH (OPTION)	10-01, 50-01
ENGINE	70-01	POWER BOB-TACH BLOCK	20-01
ENGINE COMPONENTS AND TESTING	70-01	PRESSURE RELIEF VALVE	80-01
ENGINE COOLING SYSTEM	10-01	PRESSURE SWITCH	80-01
ENGINE LUBRICATION SYSTEM	10-01		
ENGINE SPECIFICATIONS	SPEC-01	RADIATOR	70-01
ENGINE SPEED CONTROL	70-01	REAR AUXILIARY DIVERTER VALVE	20-01
EVAPORATOR	80-01	REAR DOOR	50-01
EVAPORATOR/HEATER UNIT	80-01	REAR GRILL	50-01
EXPANSION VALVE	80-01	RECEIVER/DRIER	80-01
		RECONDITIONING THE ENGINE	70-01
FAN GEARBOX	10-01	REGULAR MAINTENANCE	80-01
FINAL DRIVE TRANSMISSION (CHAINCASE) ..	10-01	REMOTE START	10-01
FLYWHEEL AND HOUSING	70-01		
FRONT AUXILIARY HYD. COUPLER BLOCK	20-01		
FUEL SYSTEM	10-01		
FUEL TANK	50-01		
GENERAL AIR CONDITIONING SERVICE			
GUIDELINES	80-01		

ALPHABETICAL INDEX (CONT'D)

SAFETY	80-01
SEAT BAR	50-01
SEAT BAR SENSOR	60-01
SELECT VALVE.....	20-01
SERVICE SCHEDULE	10-01
SPARK ARRESTOR MUFFLER.....	10-01
STANDARD TORQUE SPECIFICATIONS FOR BOLTS	SPEC-01
STARTER	60-01
SYSTEM CHARGING AND RECLAMATION	80-01
SYSTEM TROUBLESHOOTING CHART	80-01
TEMPERATURE/PRESSURE	80-01
THERMOSTAT.....	80-01
TIRE MAINTENANCE	10-01
TORQUE SPECIFICATIONS FOR BOLTS	SPEC-01
TOWING THE LOADER	10-01
TRACTION LOCK.....	60-01
TRANSPORTING THE BOBCAT LOADER.....	10-01
TROUBLESHOOTING.....	70-01
TURBOCHARGER	70-01
U.S. TO METRIC CONVERSION	SPEC-01
ACS- ADVANCED CONTROL SYSTEM	
AHC- ADVANCED HAND CONTROL SYSTEM	
BICS™-BOBCAT INTERLOCK CONTROL SYSTEM	

CONTENTS

FOREWORD	II
SAFETY INSTRUCTIONS	V
SERIAL NUMBER LOCATION	IX
DELIVERY REPORT	X
BOBCAT LOADER IDENTIFICATION	XI
SAFETY AND MAINTENANCE	10-01
HYDRAULIC SYSTEM	20-01
HYDROSTATIC SYSTEM	30-01
DRIVE SYSTEM	40-01
MAIN FRAME	50-01
ELECTRICAL SYSTEM	60-01
ENGINE SERVICE	70-01
HEATING, VENTILATION, AIR CONDITIONING	80-01
SPECIFICATIONS	SPEC-01

**SAFETY &
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**HYDROSTATIC
SYSTEM**

**DRIVE
SYSTEM**

MAIN FRAME

**ELECTRICAL
SYSTEM**

**ENGINE
SERVICE**




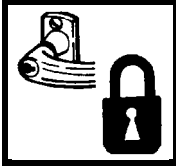
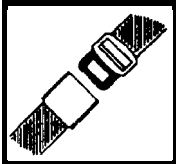
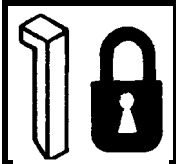
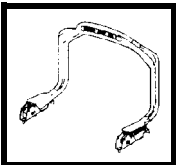
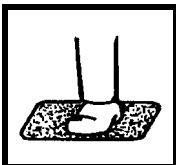
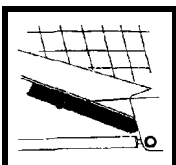
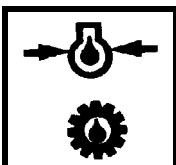
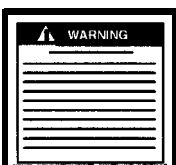
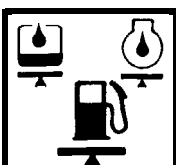
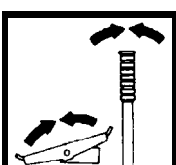
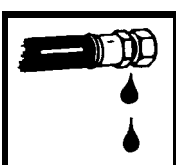

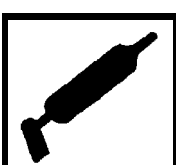
HVAC

SPECIFICATIONS

FOREWORD

This manual is for the Bobcat loader mechanic. It provides necessary servicing and adjustment procedures for the Bobcat loader and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, Starting procedure, daily checks, etc.

A general inspection of the following items must be made after the loader has had service or repair:

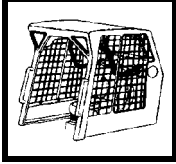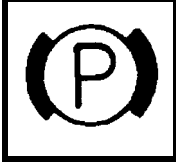- | | | | |
|--|---|---|---|
| <p>1. Check lift arm support device, replace if damaged. (Stored Position)</p> |  | <p>9. The parking brake must function correctly.</p> |  |
| <p>2. Check that ROPS mounting hardware is tightened and is Bobcat approved.</p> |  | <p>10. Enclosure door latches must open and close freely.</p> |  |
| <p>3. The seat belt must be correctly installed, functional and in good condition.</p> |  | <p>11. Bob-Tach wedges and linkages must function correctly and be in good condition.</p> |  |
| <p>4. The seat bar must be correctly adjusted, clean and lubricated.</p> |  | <p>12. Safety treads must be in good condition.</p> |  |
| <p>5. Check lift arm support device; replace if damaged.</p> |  | <p>13. Check for correct function of indicator lamps (Optional on some models).</p> |  |
| <p>6. Machine signs must be legible and in the correct location.</p> |  | <p>14. Check hydraulic fluid level, engine oil level and fuel supply.</p> |  |
| <p>7. Steering levers and foot pedals must return to neutral.</p> |  | <p>15. Inspect for fuel, oil or hydraulic fluid leaks.</p> |  |
| <p>8. Check for correct function of the work lights</p> |  | <p>16. Lubricate the loader.</p> |  |

 
**Thank you very much
for your reading.**

**Please click here and go
back to the website.**


**Then, you can
download the complete
manual instantly.**

No waiting.


17. Check the condition of the battery and cables.

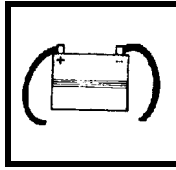

 
18. Inspect the air cleaner for damage or leaks. Check the condition of the element.

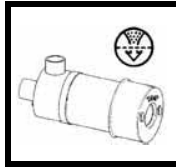

 
19. Check the electrical charging system.

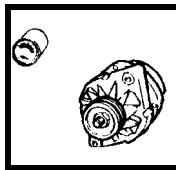

 
20. Check tires for wear and pressure.

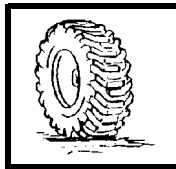

 21. Inspect for loose or broken parts or connections.

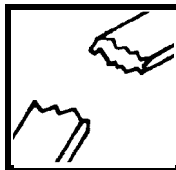

 
22. Operate the loader and check all functions.

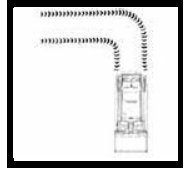


23. Check for any field modification not completed.



 24. Check for correct function of the Bobcat Interlock Control System (BICS™) before the machine is returned to the customer.

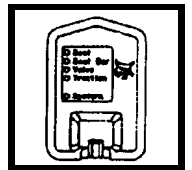

 Recommend to the owner that all necessary corrections be made before the machine is returned to service.

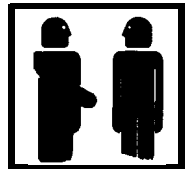

**CALIFORNIA
PROPOSITION 65 WARNING**
Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.