

T250

TURBO

T250

TURBO


HIGH FLOW



Bobcat®

Service Manual

S/N 523111001 & Above
S/N 523011001 & Above

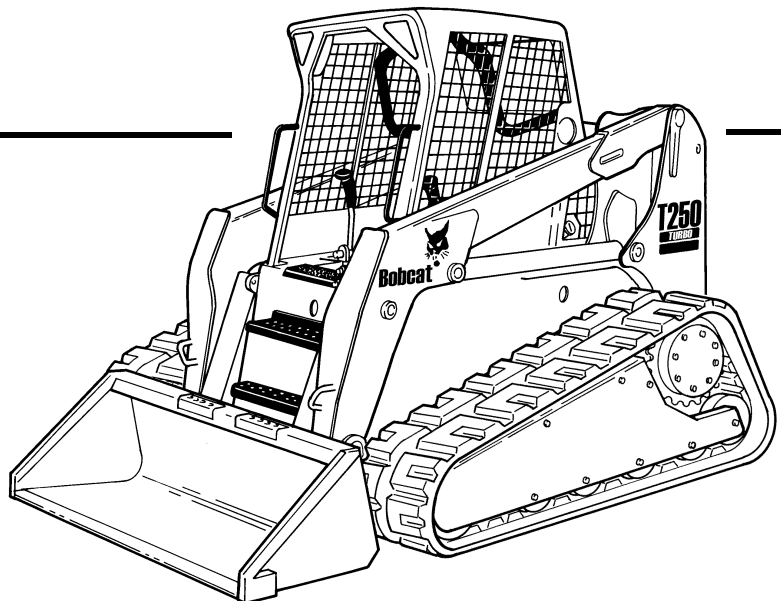

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)

6902451 (3-06)

IR Ingersoll Rand
Compact Vehicle Technologies

Printed in U.S.A.

© Bobcat Company 2006

MAINTENANCE SAFETY




WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0903




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

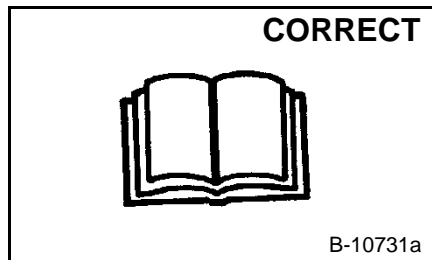


⚠ Never service the Bobcat Compact Track Loader without instructions.

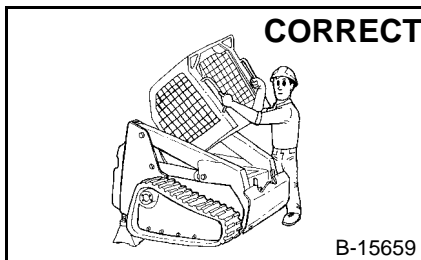


⚠ Use the correct procedure to lift or lower operator cab.

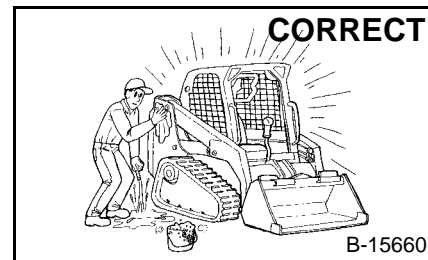


⚠ Cleaning and maintenance are required daily.

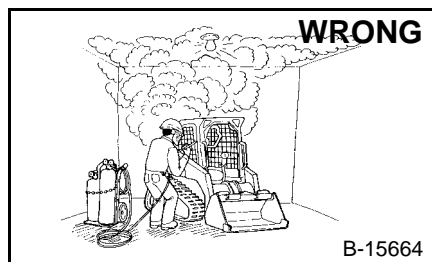


⚠ Have good ventilation when welding or grinding painted parts.
 ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
 ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

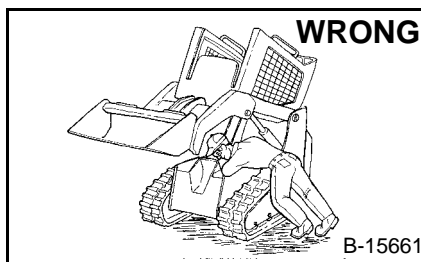


⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

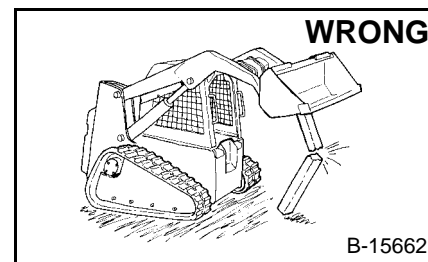

⚠ Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
 ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

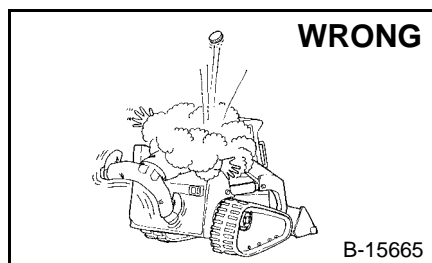

⚠ Stop, cool and clean engine of flammable materials before checking fluids.
 ⚠ Never service or adjust loader with the engine running unless instructed to do so in the manual.
 ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
 ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

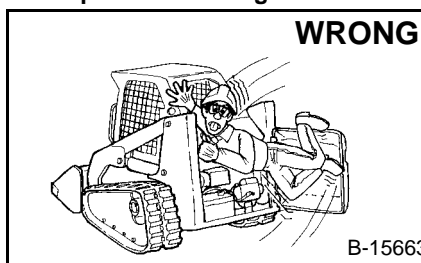

⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
 ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
 ⚠ Keep rear door closed except for service. Close and latch door before operating the loader.



⚠ Lead-acid batteries produce flammable and explosive gases.
 ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
 ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use **genuine Bobcat replacement parts**. The Service Safety Training Course is available from your Bobcat dealer.

ALPHABETICAL INDEX

ADVANCED CONTROL SYSTEM (ACS)	60-01	GENERAL AIR CONDITIONING SERVICE GUIDELINES.....	80-01
AIR CLEANER	70-01	HEATER COIL.....	80-01
AIR CLEANER SERVICE	10-01	HEATER VALVE	80-01
AIR CONDITIONING SERVICE	80-01	HYDRAULIC CONNECTION SPECS	SPEC-01
AIR CONDITIONING SYSTEM FLOW	80-01	HYDRAULIC CONTROL VALVE (ADVANCED CONTROL SYSTEM) (ACS)	20-01
ALTERNATOR.....	60-01	HYDRAULIC CONTROL VALVE (FOOT CONTROL).....	20-01
 		HYDRAULIC FLUID RESERVOIR	20-01
BASIC TROUBLESHOOTING	80-01	HYDRAULIC/HYDROSTATIC FLUID SPECIFICATIONS	SPEC-01
BATTERY	60-01	HYDRAULIC/HYDROSTATIC FILTER.....	20-01
BICS™ SYSTEM	60-01	HYDRAULIC/HYDROSTATIC SYSTEM	10-01
BLOWER FAN	80-01	HYDRAULIC PUMP	20-01
BOBCAT CONTROLLERS	60-01	HYDRAULIC PUMP (CHARGE).....	20-01
BOB-TACH	10-01, 50-01	HYDRAULIC PUMP (HI FLOW)	20-01
BRAKE.....	40-01	HYDRAULIC SYSTEM INFORMATION.....	20-01
BUCKET POSITION VALVE	20-01	HYDROSTATIC MOTOR	30-01
 		HYDROSTATIC PUMP	30-01
CHARGE PRESSURE SENDER.....	30-01	HYDROSTATIC SYSTEM INFORMATION	30-01
COMPONENTS	80-01	 	
COMPRESSOR	80-01	INSIDE ACCESS PANEL	50-01
CONDENSER	80-01	INSTRUMENT PANEL	60-01
CONTROL HANDLE.....	50-01	 	
CONTROL HANDLE (ADVANCED CONTROL SYSTEM) (ACS) SELECTABLE HAND/FOOT CONTROL ...	50-01	LIFT ARMS.....	50-01
CONTROL PANEL.....	50-01	LIFT ARM BY-PASS CONTROL VALVE	20-01
CONTROL PEDALS	50-01	LIFT ARM SUPPORT DEVICE	10-01
CONTROL PEDALS (ACS)	50-01	LIFTING AND BLOCKING THE LOADER.....	10-01
CONVERSIONS	SPEC-01	LIGHTS	60-01
COOLING FAN	70-01	LOADER SPECIFICATIONS (S250)	SPEC-01
CYLINDER (LIFT).....	20-01	LOADER SPECIFICATIONS (S300)	SPEC-01
CYLINDER (POWER BOB-TACH)	20-01	LUBRICATING THE LOADER	10-01
CYLINDER (TILT)	20-01	 	
 		MAIN RELIEF VALVE (ACS).....	20-01
DIAGNOSTICS SERVICE CODE	60-01	MAIN RELIEF VALVE (FOOT CONTROL)	20-01
DRIVE BELT	30-01	MUFFLER.....	70-01
DRIVE COMPONENTS	40-01	 	
 		OIL COOLER (SEAL TO CONNECT) (STC).....	30-01
ELECTRICAL/HYDRAULIC CONTROLS		OPERATOR CAB	10-01, 50-01
REFERENCE.....	60-01	OPERATOR SEAT	50-01
ELECTRICAL SYSTEM INFORMATION.....	60-01	OPERATOR SEAT (SUSPENSION)	50-01
ENGINE	70-01	 	
ENGINE COOLING SYSTEM.....	10-01	POWER BOB-TACH	10-01, 50-01
ENGINE LUBRICATION SYSTEM	10-01	POWER BOB-TACH BLOCK	20-01
ENGINE SPECIFICATIONS	SPEC-01	POWER BOB-TACH BLOCK (EARLY MODELS) ...	20-01
ENGINE SPEED CONTROL	70-01	PRESSURE RELIEF VALVE.....	80-01
EVAPORATOR	80-01	PRESSURE SWITCH.....	80-01
EVAPORATOR/HEATER UNIT	80-01		
EXPANSION VALVE	80-01		
FAN GEARBOX	10-01		
FLYWHEEL AND HOUSING	70-01		
FLYWHEEL RPM SENSOR	60-01		
FRONT AUXILIARY HYD. COUPLER BLOCK.....	20-01		
FUEL SYSTEM	10-01		
FUEL TANK	50-01		

ALPHABETICAL INDEX (CONT'D)

RADIATOR	70-01
REAR AUXILIARY DIVERTER.....	20-01
REAR DOOR	50-01
REAR GRILL	50-01
RECEIVER/DRIER	80-01
RECONDITIONING THE ENGINE	70-01
REGULAR MAINTENANCE	80-01
REMOTE START	10-01
SAFETY	80-01
SEAT BAR	50-01
SEAT BAR SENSOR.....	60-01
SERVICE SCHEDULE	10-01
STARTER.....	60-01
SYSTEM CHARGING AND RECLAMATION	80-01
SYSTEM TROUBLESHOOTING CHART	80-01
TEMPERATURE/PRESSURE.....	80-01
THERMOSTAT	80-01
TORQUE SPECIFICATIONS FOR BOLTS ...SPEC-01	
TOWING THE LOADER.....	10-01
TRACTION LOCK.....	60-01
TRANSPORTING THE BOBCAT LOADER	10-01
TROUBLESHOOTING.....	70-01

CONTENTS

FOREWORD.....	II
SAFETY INSTRUCTIONS	V
SERIAL NUMBER LOCATION	IX
DELIVERY REPORT.....	X
BOBCAT LOADER IDENTIFICATION	XI
SAFETY AND MAINTENANCE.....	10-01
HYDRAULIC SYSTEM	20-01
HYDROSTATIC SYSTEM.....	30-01
DRIVE SYSTEM	40-01
MAIN FRAME	50-01
ELECTRICAL SYSTEM & ANALYSIS	60-01
ENGINE SERVICE	70-01
HEATING, VENTILATION, AIR CONDITIONING.....	80-01
SPECIFICATIONS	SPEC-01

**SAFETY &
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**HYDROSTATIC
SYSTEM**

**DRIVE
SYSTEM**

MAIN FRAME

**ELECTRICAL
SYSTEM &
ANALYSIS**

**ENGINE
SERVICE**

HVAC


SPECIFICATIONS

FOREWORD

This manual is for the Bobcat loader mechanic. It provides necessary servicing and adjustment procedures for the Bobcat loader and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

A general inspection of the following items must be made after the loader has had service or repair:


1. Check that the ROPS/FOPS (Including side screens) is in good condition and is not modified.

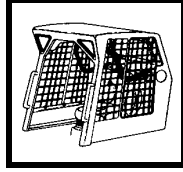


2. Check that ROPS mounting hardware is tightened and is Bobcat approved.




3. The seat belt must be correctly installed, functional and in good condition.

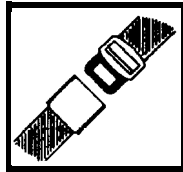

4. The seat bar must be correctly adjusted, clean and lubricated.

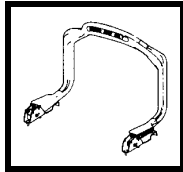


5. Check lift arm support device, replace if damaged.

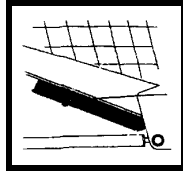

6. Machine signs must be legible and in the correct location.




7. Steering levers and foot pedals must return to neutral.

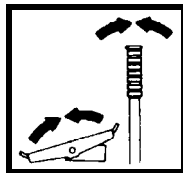


8. Check for correct function of the work lights




9. The parking brake must function correctly.

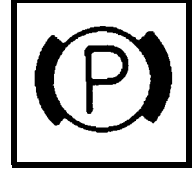


10. Enclosure door latches must open and close freely.

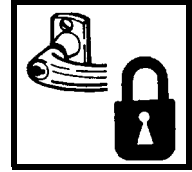


11. Bob-Tach wedges and linkages must function correctly and be in good condition.

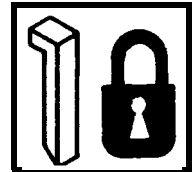


12. Safety treads must be in good condition.

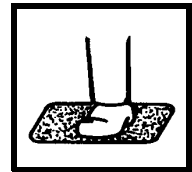


13. Check for correct function of indicator lamps (Optional on some models).

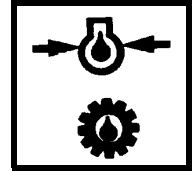


14. Check hydraulic fluid level, engine oil level and fuel supply.

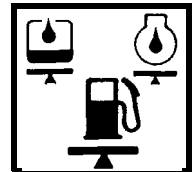


15. Inspect for fuel, oil or hydraulic fluid leaks.

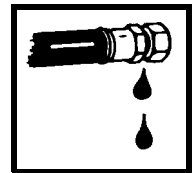


16. Lubricate the loader.

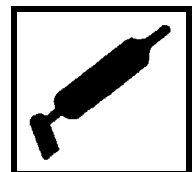


17. Check the condition of the battery and cables.

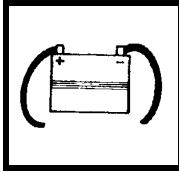

22. Operate the loader and check all functions.

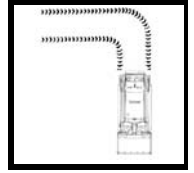


18. Inspect the air cleaner for damage or leaks. Check the condition of the element.

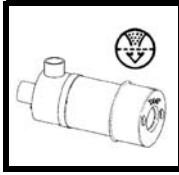


23. Check for any field modification not completed.




19. Check the electrical charging system.

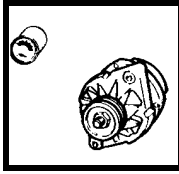


24. Check for correct function of the Bobcat Interlock Control System (BICS™) before the machine is returned to the customer.

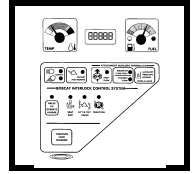


20. Check tracks for wear and tension.

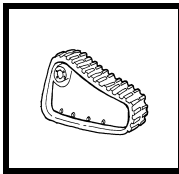

25. Recommend to the owner that all necessary corrections be made before the machine is returned to service.

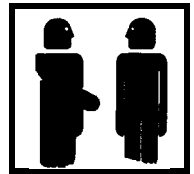

21. Inspect for loose or broken parts or connections.

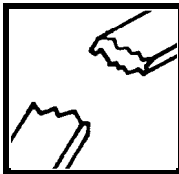

**CALIFORNIA
PROPOSITION 65 WARNING**
Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

SAFETY INSTRUCTIONS



Safety Alert Symbol

This symbol with a warning statement means:
“Warning, be alert! Your safety is involved!”
Carefully read the message that follows.



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



WARNING

Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W-2044-1285

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

The following publications provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the machine or attachment contains operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.
- An Operator's Handbook fastened to the operator cab. It's brief instructions are convenient to the operator. The handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The AEM Safety Manual delivered with the machine gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.
- The Skid-Steer Loader Operator Training Course is available through your local dealer or at www.training.bobcat.com or www.bobcat.com. This course is intended to provide rules and practices of correct operation of the Skid-Steer Loader. The course is available in English and Spanish versions.
- Service Safety Training Courses are available from your Bobcat dealer or at www.training.bobcat.com or www.bobcat.com. They provide information for safe and correct service procedures.
- The Skid-Steer Loader Safety Video is available from your Bobcat dealer or at www.training.bobcat.com or www.bobcat.com.

SI SSL-0206 SM

**T250 Bobcat Loader
Service Manual**

SAFETY INSTRUCTIONS (CONT'D)

Fire Prevention

The machine and attachments have components that are at high temperature under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.


Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it will increase fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential hazard.

The spark arrestor muffler is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

- Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.
- The operator cab, engine compartment, and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazard and overheating.
- Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part.
- Check fuel and hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Tighten or replace any parts that show leakage. Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.
- Do not use ether or starting fluids on any engine which has glow plugs. These starting aids can cause explosion and injure you or bystanders.
- Always clean the machine, disconnect the battery, and disconnect the wiring from the controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding. Have good ventilation when grinding or welding painted parts. Wear a dust mask when grinding painted parts. Toxic dust or gas can be produced.
- Stop the engine and let it cool before adding fuel. **NO SMOKING!**

- Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.
- Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrestor muffler (if equipped).

Figure 1

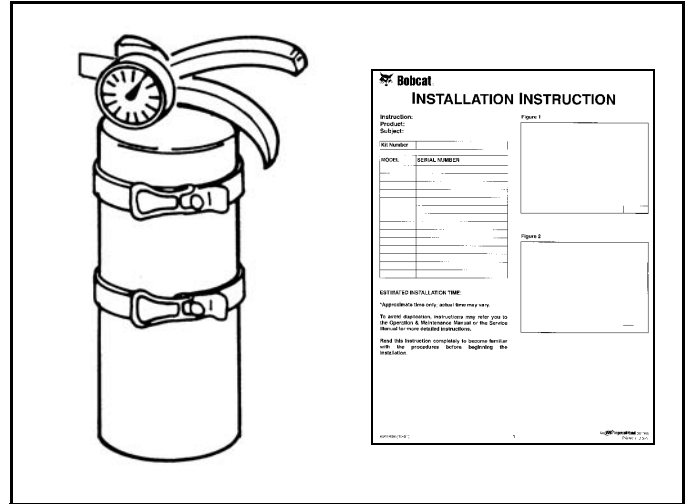


- Know where fire extinguishers and first aid kits are located and how to use them. Fire extinguishers are available from your Bobcat dealer [Figure 1].

SERIAL NUMBER LOCATION

Always use the serial number of the loader when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

Loader Serial Number

Figure 2

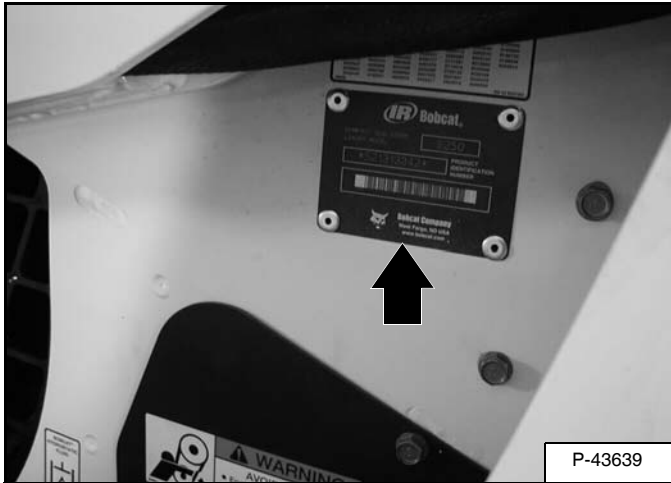

The loader serial number plate is located on the outside of the loader frame [Figure 2].


Explanation of loader Serial Number:

XXXX	XXXXX
Model 1.-Model/ Engine Combination	Model 2.-Production Sequence (Series)

1. The four digit Model/Engine Combination Module number identifies the model number and engine combination.
2. The five digit Production Sequence Number identifies the order which the loader is produced.

Engine Serial Number

Figure 3

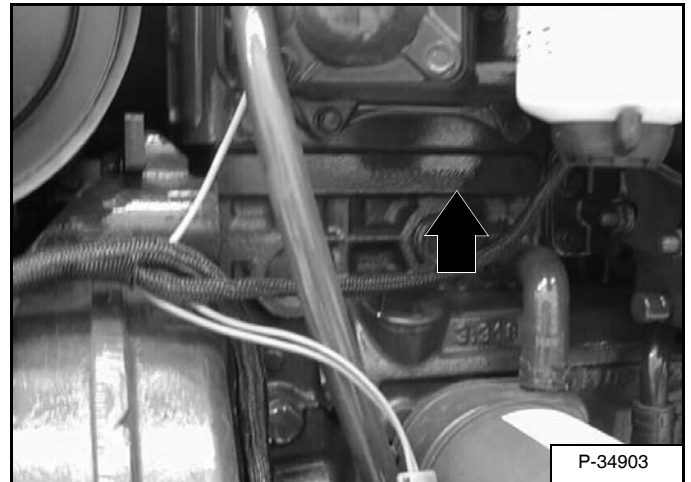

The engine serial number is located on the engine block [Figure 3].


DELIVERY REPORT

Figure 4

The diagram shows a form layout for a delivery report. It includes a title 'DELIVERY REPORT', a 'WARNING' section, and a reference code 'B-16315'.

The Delivery Report must be filled out by the dealer and signed by the owner or operator when the Bobcat loader is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely **[Figure 4]**.

BOBCAT LOADER IDENTIFICATION

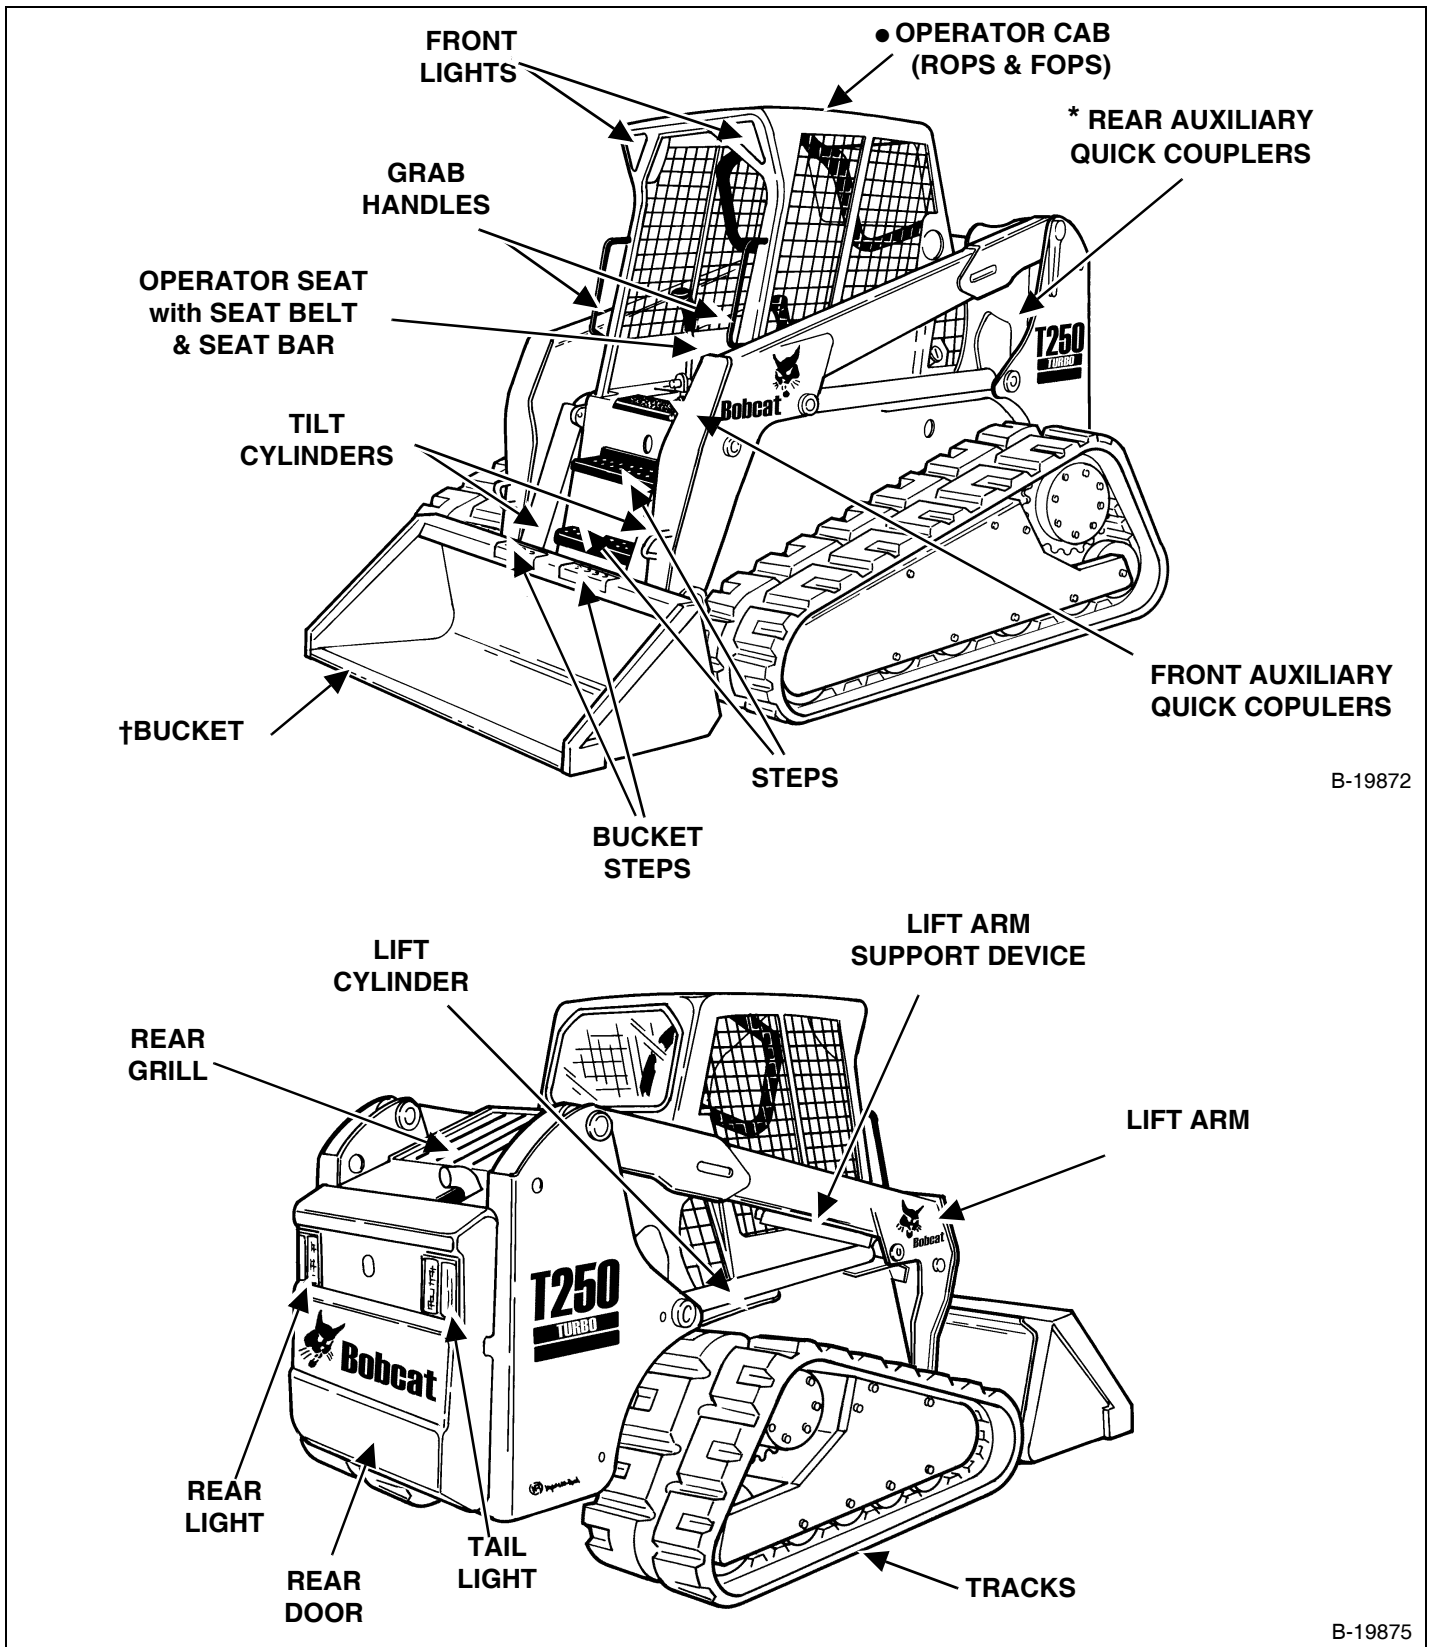

B-19872

B-19875

* Option or Field Accessory

† Many buckets and other attachments are available.

● ROPS, FOPS - Roll Over Protective Structure per SAE J1040 and ISO 3471, and Falling Object Protective Structure per SAE 1043 and ISO 3449, Level I. Level II is available.

SAFETY AND MAINTENANCE

SAFETY & MAINTENANCE

AIR CLEANER SERVICE	10-70-1
Replacing Filter Element	10-70-1
BOB-TACH	10-130-1
Inspection And Maintenance	10-130-1
ENGINE COOLING SYSTEM	10-80-1
Cleaning Cooling System	10-80-1
ENGINE LUBRICATION SYSTEM	10-100-1
Checking Engine Oil	10-100-1
Oil Chart	10-100-1
Replacing Oil And Filter	10-100-1
FAN GEARBOX	10-120-1
Checking And Adding Oil	10-120-1
FUEL SYSTEM	10-90-1
Filling The Fuel Tank	10-90-1
Fuel Filter	10-90-2
Fuel Specifications	10-90-1
Removing Air From The Fuel System	10-90-2
HYDRAULIC/HYDROSTATIC SYSTEM	10-110-1
Checking And Adding Fluid	10-110-1
Hydraulic/Hydrostatic Filter Replacement	10-110-1
Replacing Hydraulic Fluid And Case Drain Filters	10-110-2
LIFT ARM SUPPORT DEVICE	10-20-1
Engaging The Lift Arm Support Device	10-20-1
Disengaging The Lift Arm Support Device	10-20-2
LIFTING AND BLOCKING THE LOADER	10-10-1
Procedure	10-10-1
LUBRICATING THE LOADER	10-140-1
Procedure	10-140-1
OPERATOR CAB	10-30-1
Description	10-30-1
Emergency Exit	10-30-2
Lowering The Operator Cab	10-30-2
Raising The Operator Cab	10-30-1

Continued On Next Page


SAFETY AND MAINTENANCE (CONT'D)

POWER BOB-TACH	10-131-1
Inspection And Maintenance	10-131-1
REMOTE START	10-50-1
Procedure	10-50-3
Procedure For Loader With Attachments Control Harness	10-50-2
Procedure For Loader W/O Attachments Control Harness	10-50-1
SERVICE SCHEDULE	10-60-1
Chart	10-60-1
TRANSPORTING THE BOBCAT LOADER	10-40-1
Procedure	10-40-1

LIFTING AND BLOCKING THE LOADER

Procedure

Figure 10-10-1

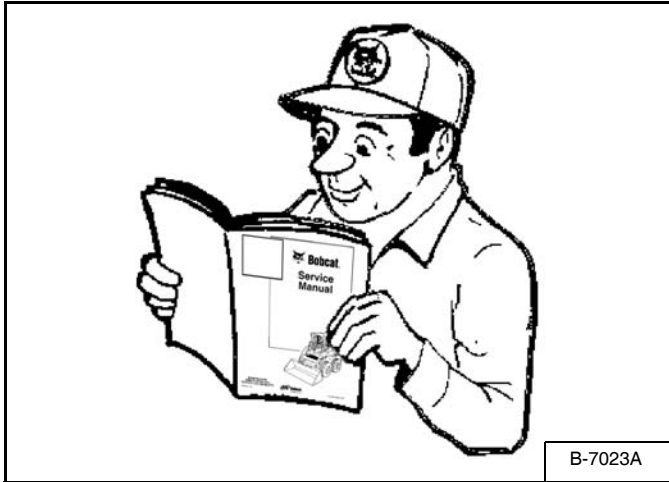

WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0199

Read the Removal & Installation, Disassembly & Assembly, etc. completely to become familiar with the procedure before beginning [Figure 10-10-1].

Always park the loader on a level surface.

WARNING

Put jackstands under the front axles and rear corners of the frame before running the engine for service. Failure to use jackstands can allow the machine to fall or move and cause injury or death.

W-2017-0286

Figure 10-10-2



Lift the rear of the loader and install jackstands [Figure 10-10-2].

Figure 10-10-3



Lift the front of the loader and put jackstands under the axle tubes [Figure 10-10-3].

NOTE: Make sure the jackstands do not touch the tracks.

LIFT ARM SUPPORT DEVICE

Engaging The Lift Arm Support Device



Never work on a machine with the lift arms up unless the lift arms are secured by an approved lift arm support device. Failure to use an approved lift arm support device can allow the lift arms or attachment to fall and cause injury or death.


W-2059-0598



Service lift arm support device if damaged or if parts are missing. Using a damaged lift arm support or with missing parts can cause lift arms to drop causing injury or death.

W-2271-1197


Figure 10-20-1

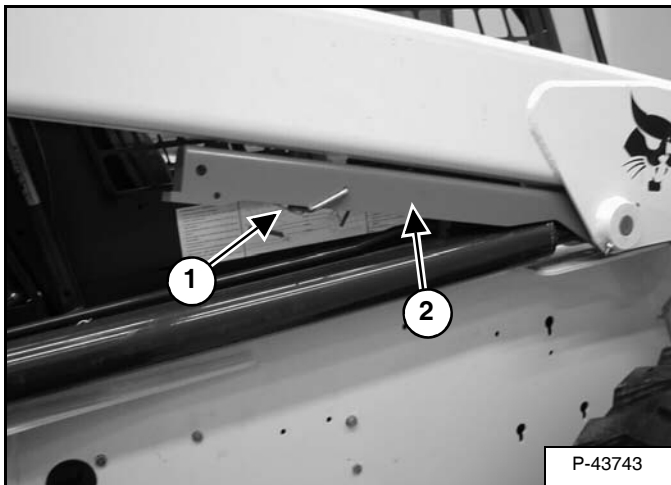

Maintenance and service work can be done with the lift arms lowered. If the lift arms are raised, use the following procedures to engage and disengage an approved lift arm support device:


Install jackstands under the rear corners of the loader frame. Disconnect the spring from the lift arm support device retaining pin (Item 1). Support the lift arm support device (Item 2) [Figure 10-20-1] with your hand and remove the retaining pin.

Figure 10-20-2

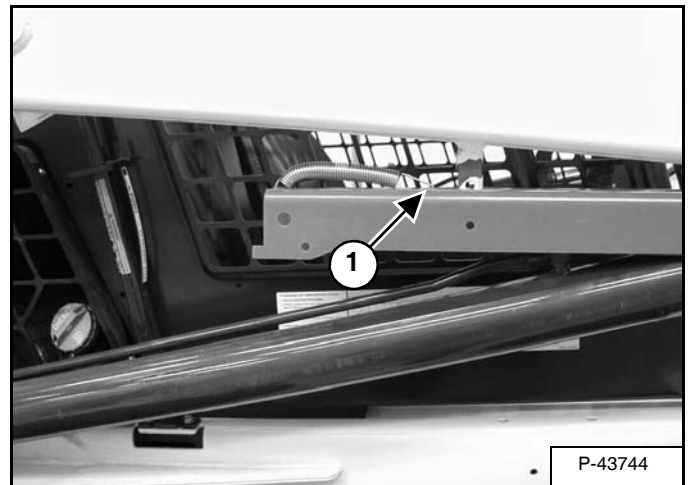

Lower the lift arm support device on top of the lift cylinder. Hook the free end of the spring (Item 1) [Figure 10-20-2] to the lift arm support device so there will be no interference with the support device engagement.


With the operator in the seat, seat belt fastened and seat bar lowered, start the engine.

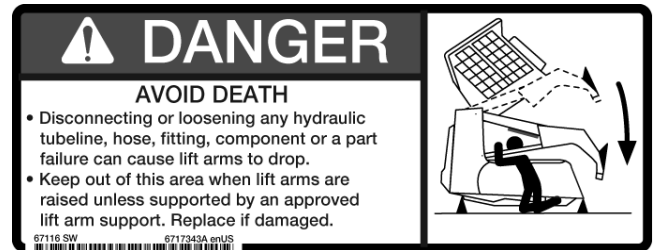

LIFT ARM SUPPORT DEVICE (CONT'D)

Engaging The Lift Arm Support Device (Cont'd)

Figure 10-20-3

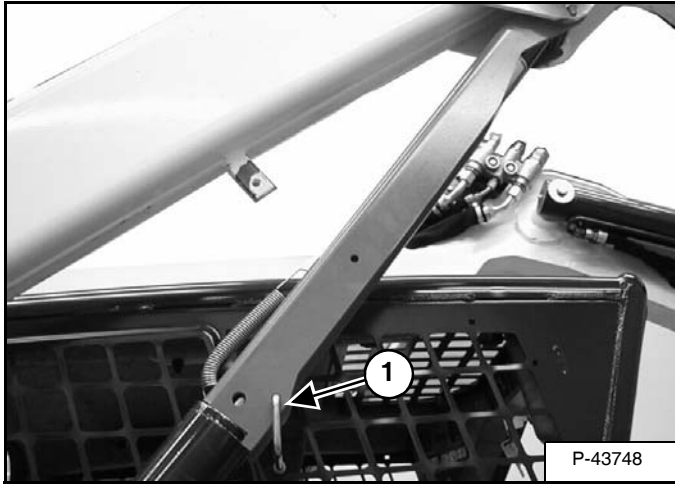


Raise the lift arms, until the lift arm support device drops onto the lift cylinder rod.

Lower the lift arms slowly until the lift arm support device is held between the lift arms and lift cylinder. Stop the engine. Raise the seat bar and move the pedals until both pedals lock.

Install the pin (Item 1) [Figure 10-20-3] into the rear of the lift arm support device below the cylinder rod.

Disengaging The Lift Arm Support Device

Figure 10-20-4

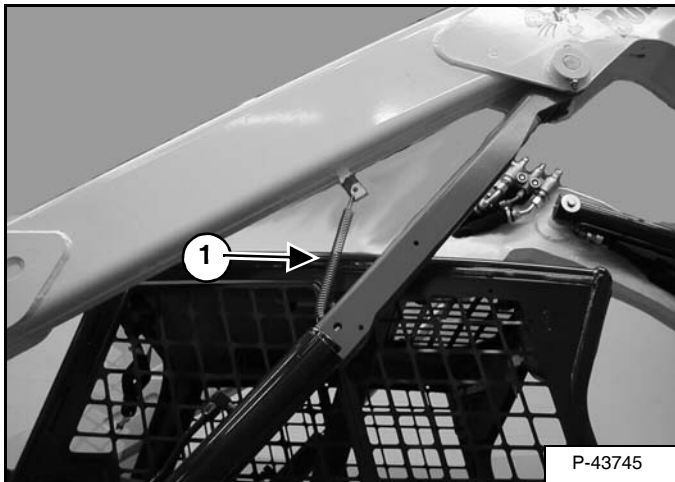

Remove the pin from the lift arm support device.

Connect the spring (Item 1) [Figure 10-20-4] from the lift arm support device to the bracket below the lift arm.

With the operator in the seat, seat belt fastened and seat bar lowered, start the engine.

Figure 10-20-5



Raise the lift arms a small amount and the spring will lift the support device off the lift cylinder rod [Figure 10-20-5]. Lower the lift arms and stop the engine.

Raise the seat bar and move the pedals until both pedals lock.

Disconnect the spring from the bracket.

Raise the support device into the storage position and insert the pin through the lift arm support device and bracket. (See Engaging The Lift Arm Support Device on Page 10-20-1.)

Connect the spring to the pin. (See Engaging The Lift Arm Support Device on Page 10-20-1.)

**Thank you very much
for your reading.**

**Please click here and go
back to the website.**

**Then, you can
download the complete
manual instantly.**

No waiting.