

 
6

5

3



# Service Manual

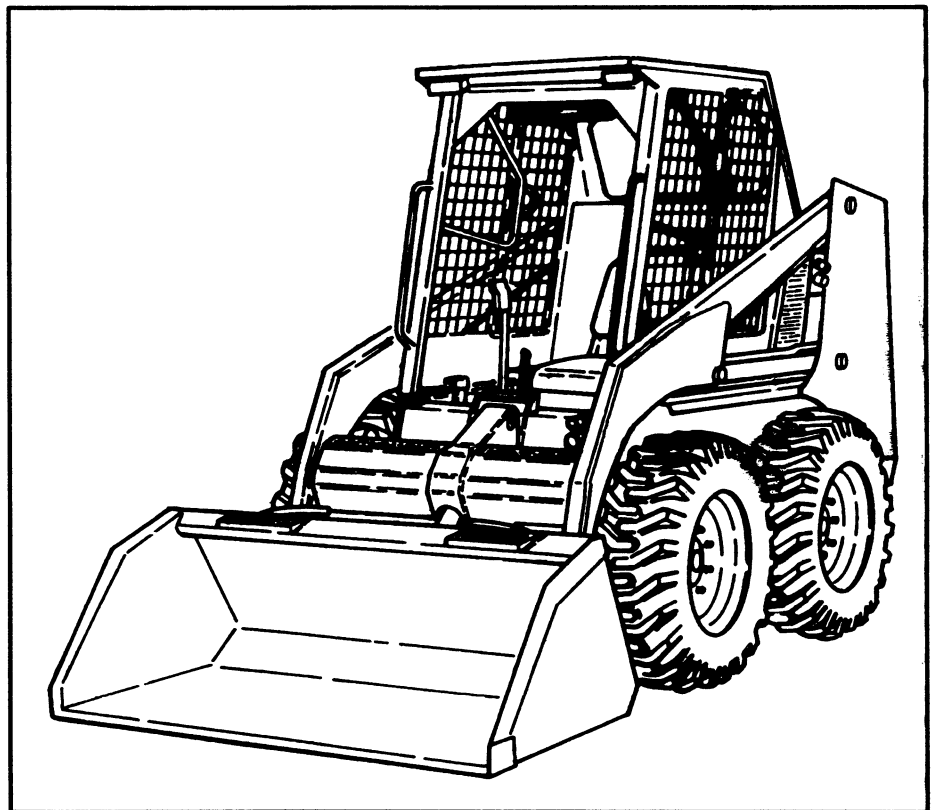

EQUIPPED WITH  
BOBCAT INTERLOCK  
CONTROL SYSTEM (BICS™)

**MELROE  
INGERSOLL-RAND**

6724493 (12-95) Revised (1-97)

Printed in U.S.A.



© Melroe Company 1997

# MAINTENANCE SAFETY



 
## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903




**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

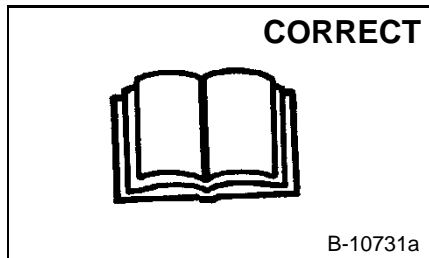


B-10731a

 Never service the Bobcat Skid-Steer Loader without instructions.

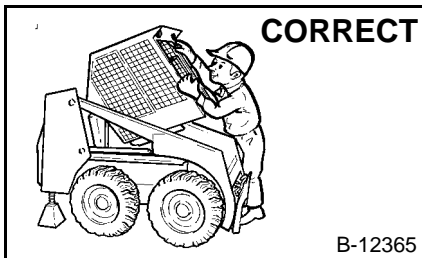


B-12365

 Use the correct procedure to lift or lower operator cab.

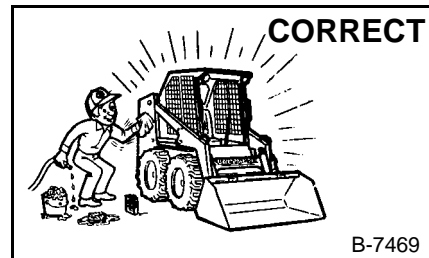


B-7469

 Cleaning and maintenance are required daily.

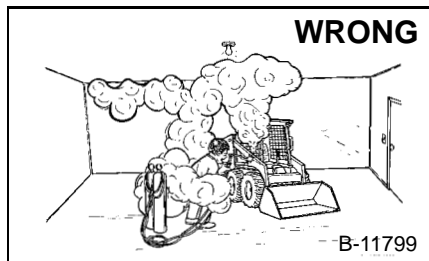


B-11799

 - Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

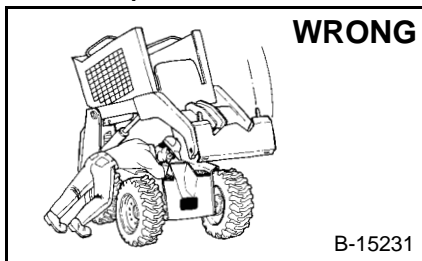


B-15231

 Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

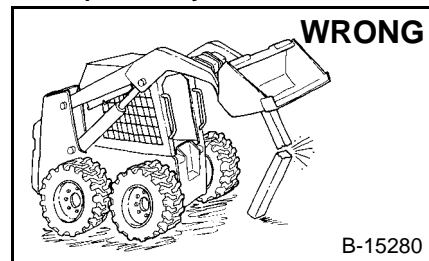


B-15280

 - Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

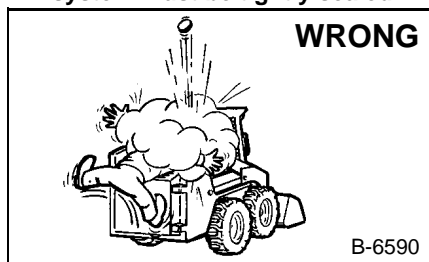


B-6590

 - Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

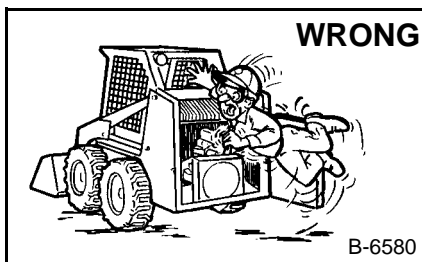

B-6580

 - Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.

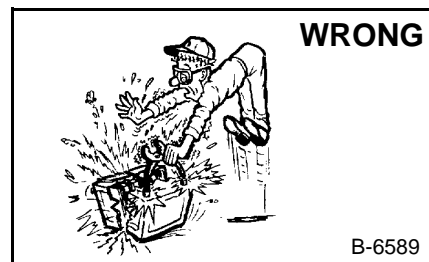

B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW01-0805

## ALPHABETICAL INDEX

AIR CLEANER .....	7-1	OIL COOLER .....	3-1
AIR CLEANER SERVICE .....	1-1	OPERATOR CAB .....	1-1, 5-1
ALTERNATOR .....	6-1	OPERATOR CAB GAS CYLINDER .....	5-1
ALTERNATOR BELT .....	1-1	OPERATOR SEAT .....	5-1
AXLE SEAL .....	4-1		
AXLE, SPROCKET AND BEARINGS .....	4-1	PARKING BRAKE .....	4-1
		PARKING BRAKE DISC .....	4-1
BATTERY .....	6-1	PEDAL INTERLOCK LINKAGE .....	2-1
BICS™ SYSTEM CONTROLLER .....	8-1	PEUGEOT ENGINE TOOL KIT .....	7-1
BLOWER HOUSING/FAN GEAR BOX .....	7-1	PISTONS AND CONNECTING RODS .....	7-1
BOB-TACH .....	5-1		
BOBCAT INTERLOCK CONTROL .....		RADIATOR .....	7-1
SYSTEM (BICS™) .....	8-1	REAR DOOR .....	5-1
		REAR GRILL .....	5-1
CHAINCASE COVERS .....	4-1	RELAY SWITCHES .....	6-1
CHAINCASE FLUID .....	4-1	REMOTE START SWITCH .....	1-1
CONTROL PEDALS .....	2-1		
CONTROL PANEL .....	3-1	SEAT BAR .....	5-1
CRANKSHAFT AND BEARINGS .....	7-1	SEAT BAR RESTRAINT SYSTEM .....	1-1
CRANKSHAFT PULLEY .....	7-1	SEAT BAR SENSOR .....	8-1
CYLINDER HEAD .....	7-1	SEAT SENSOR .....	8-1
CYLINDER LOCATION & COMPRESSION .....	7-1	SERVICE SCHEDULE .....	1-1
		SPARK ARRESTOR MUFFLER .....	1-1
DECIMAL & MILLIMETER EQUIVALENTS .....	9-1	SPRING LOADED DRIVE IDLER .....	3-1
DRIVE BELT .....	1-1	STANDARD INSTRUMENT PANEL .....	6-1
DRIVE BELT HOUSING .....	3-1	STANDARD TORQUE SPECIFICATIONS .....	
DRIVE BELT TENSIONER PULLEY .....	3-1	FOR BOLTS .....	9-1
DRIVE CHAIN .....	4-1	STARTER .....	6-1
		STEERING LINKAGE .....	3-1
ELECTRICAL SYSTEM INFORMATION .....	6-1	STOPPING THE BOBCAT LOADER .....	1-1
ENGINE .....	7-1	TILT CYLINDER .....	2-1
ENGINE BLOCK .....	7-1	TILT LOCK VALVE .....	8-1
ENGINE COOLING SYSTEM .....	1-1	TIMING BELT .....	7-1
ENGINE LUBRICATION SYSTEM .....	1-1	TIRE MAINTENANCE .....	1-1
ENGINE MUFFLER .....	7-1	TOWING THE LOADER .....	1-1
ENGINE SPECIFICATIONS .....	9-1	TORQUE SPECIFICATIONS FOR LOADER .....	9-1
ENGINE SPEED CONTROL .....	7-1	TRACTION LOCK .....	8-1
ENGINE TORQUE .....	7-1	TRANSPORTING THE LOADER .....	1-1
		TROUBLESHOOTING .....	2-1, 3-1 6-1, 7-1
FAN GEARBOX .....	1-1, 7-1		
FINAL DRIVE TRANSMISSION (CHAINCASE) .....	1-1	U.S. TO METRIC CONVERSION .....	9-1
FRONT LIGHTS .....	6-1		
FUEL INJECTION PUMP .....	7-1		
FUEL INJECTOR NOZZLE .....	7-1		
FUEL SYSTEM .....	1-1		
FUEL TANK .....	5-1		
GLOW PLUGS .....	7-1		
GLOW PLUG RELAY .....	6-1		
HYDRAULIC CONTROL VALVE .....	2-1		
HYDRAULIC CYLINDER IDENTIFICATION .....	2-1		
HYDRAULIC CYLINDERS .....	2-1		
HYDRAULIC FILTER HOUSING .....	2-1		
HYDRAULIC FLUID RESERVOIR .....	2-1		
HYDRAULIC/HYDROSTATIC .....			
FLUID SPECIFICATIONS .....	9-1		
HYDRAULIC PUMP .....	2-1		
HYDRAULIC SYSTEM INFORMATION .....	2-1		
HYDRAULIC/HYDROSTATIC SYSTEM .....	1-1		
HYDROSTATIC DRIVE MOTOR .....	3-1		
HYDROSTATIC SYSTEM INFORMATION .....	3-1		
INJECTION PUMP TIMING .....	7-1		
LIFT ARMS .....	5-1		
LIFT ARM SUPPORT DEVICE .....	1-1		
LIFT CYLINDER(S) .....	2-1		
LIFT LOCK BY-PASS VALVE .....	8-1		
LIFTING AND BLOCKING THE LOADER .....	1-1		
LIFTING THE LOADER .....	1-1		
LOADER SPECIFICATIONS .....	9-1		
LUBRICATING THE LOADER .....	1-1		
MOTOR CARRIER .....	4-1		

# CONTENTS

FOREWORD .....	ii
SAFETY INSTRUCTIONS .....	v
SERIAL NUMBER LOCATIONS .....	vii
DELIVERY REPORT .....	vii
BOBCAT LOADER IDENTIFICATION .....	viii
PREVENTIVE MAINTENANCE .....	1-1
HYDRAULIC SYSTEM .....	2-1
HYDROSTATIC SYSTEM .....	3-1
DRIVE SYSTEM .....	4-1
MAIN FRAME .....	5-1
ELECTRICAL SYSTEM .....	6-1
ENGINE SERVICE .....	7-1
SYSTEMS ANALYSIS .....	8-1
SPECIFICATIONS .....	9-1

**PREVENTIVE  
MAINTENANCE**

**HYDRAULIC  
SYSTEM**

**HYDROSTATIC  
SYSTEM**

**DRIVE  
SYSTEM**

**MAIN  
FRAME**

**ELECTRICAL  
SYSTEM**

**ENGINE  
SERVICE**

**SYSTEMS  
ANALYSIS**

 

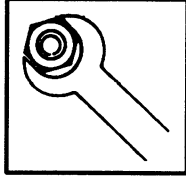 
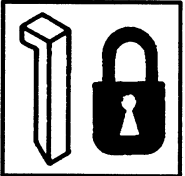 
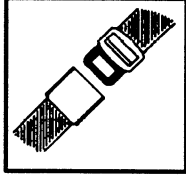 
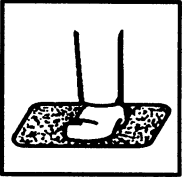 
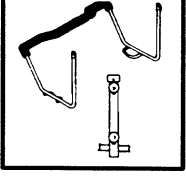 
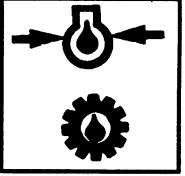 
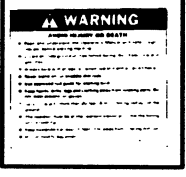 
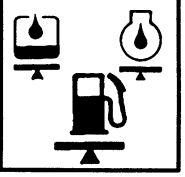 
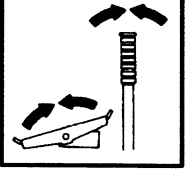 
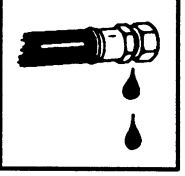 

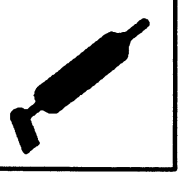 

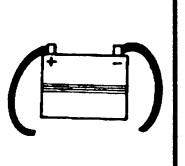 
**SPECIFICATION**

**CALIFORNIA  
PROPOSITION 65 WARNING**  
Diesel engine exhaust and some of its  
constituents are known to the State of California  
to cause cancer, birth defects and other  
reproductive harm.


# FOREWORD

 This manual is for the Bobcat loader mechanic. It provides necessary servicing and adjustment procedures for the Bobcat loader and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.


A general inspection of the following items must be made after the loader has had service or repair:

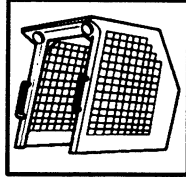- |   |   |  |   |
|---|---|--|---|
| 1. Check that the ROPS/FOPS (Including sidescreens) is in good condition and is not modified. |    | 9. Enclosure door latches must open and close freely.                              |    |
| 2. Check that ROPS mounting hardware is tightened and is Melroe approved.                     |    | 10. Bob-Tach wedges and linkages must function correctly and be in good condition. |    |
| 3. The seat belt must be correctly installed, functional and in good condition.               |    | 11. Safety treads must in good condition.  |    |
| 4. The seat bar and pedal interlocks must be correctly adjusted, clean and lubricated.        |   | 12. Check for correct function of indicator lamps (Optional on some models).       |   |
| 5. Machine signs must be legible and in the correct location.                                 |  | 13. Check hydraulic fluid level, engine oil level and fuel supply.                 |  |
| 6. Steering levers and foot pedals must return to neutral.                                    |  | 14. Inspect for fuel, oil or hydraulic fluid leaks.                                |  |
| 7. Check for correct function of the work lights.   |  | 15. Lubricate the loader.  |  |
| 8. The parking brake must function correctly.   |  | 16. Check the condition of the battery and cables.                                 |  |


17. Inspect the air cleaner for damage or leaks. Check the condition of the element.

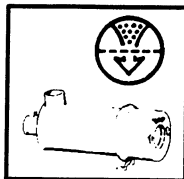

 
18. Check the electrical charging system.

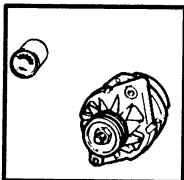

 
19. Check tires for wear and pressure.

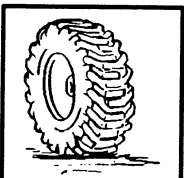

 20. Inspect for loose or broken parts or connections.

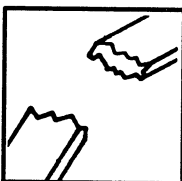

 
21. Operate the loader and check all functions.

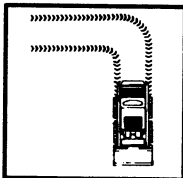


22. Check for any field modification not completed.



 23. Check for correct function of the Bobcat Interlock Control System (BICS™) before the machine is returned to the customer.

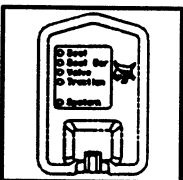

 Recommend to the owner that all necessary corrections be made before the machine is returned to service.

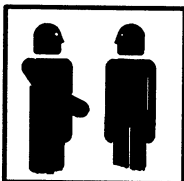

## SAFETY INSTRUCTIONS

# **WARNING**

**Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.**

W-2003-0199

The following publications provide information on the safe use and maintenance of the loader and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the loader gives operating information as well as routine maintenance and service procedures. It is a part of the loader and must stay with the machine when it is sold. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat loader dealer.
- The loader has machine signs (decals) which instruct on the safe operation and care. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat loader dealer.
- The loader has a plastic Operator's Handbook fastened to the operator cab. Its brief instructions are convenient to the operator. The Handbook is available from your dealer in an English edition or a combination English, French, German, Italian, Dutch, Spanish, Portuguese, Danish, Swedish & Finnish.
- The EMI Safety Manual (available in Spanish) delivered with the loader gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.
- The Skid-Steer Loader Operator Training Course is available through your local dealer. This course is intended to provide rules and practices for correct operation of the Bobcat loader. The course is available in English and Spanish versions.
- The Bobcat Skid-Steer Loader Safety Video is available from your Bobcat Dealer.

**Thank you very much  
for your reading.**

**Please click here and go  
back to the website.**

**Then, you can  
download the complete  
manual instantly.**

**No waiting.**