

 


Bobcat®

Service Manual

335 Compact Excavator

S/N AAD111001 & Above
S/N A9KA11001 & Above

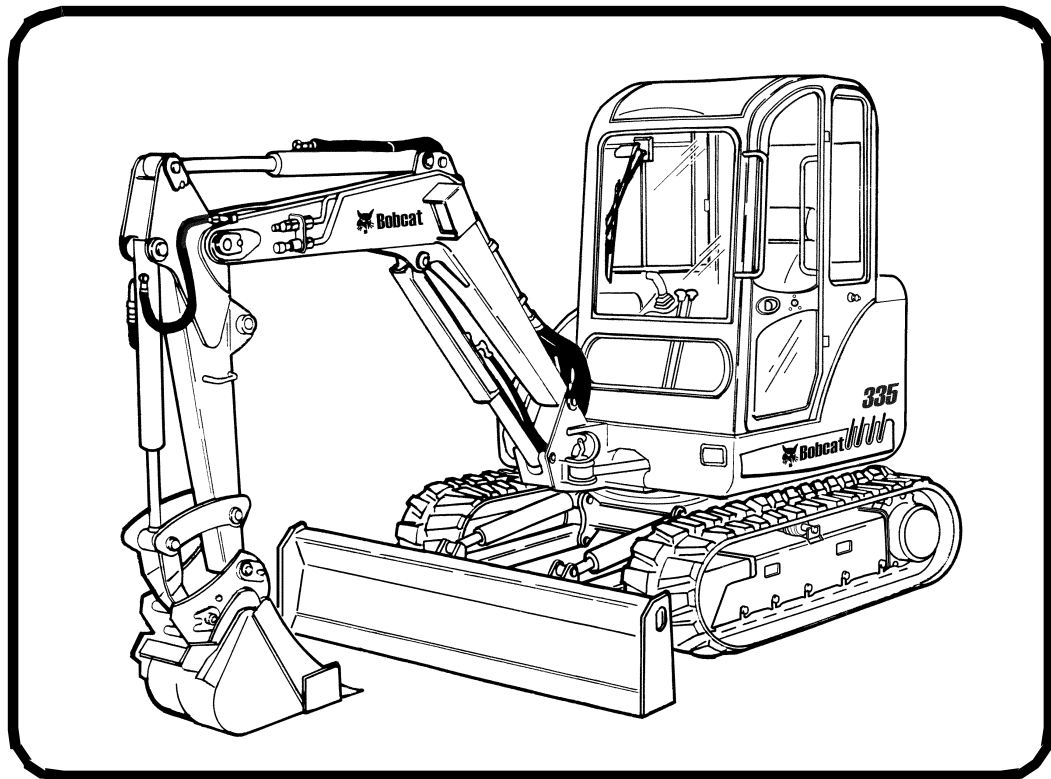

MAINTENANCE SAFETY



 
WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

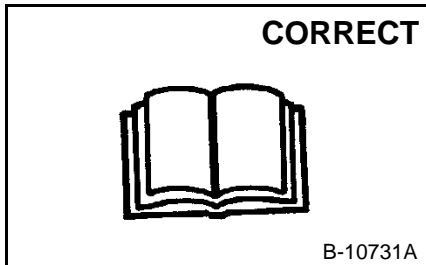


B-10731A

 - ⚠ Never service the Bobcat Compact Excavator without instructions.

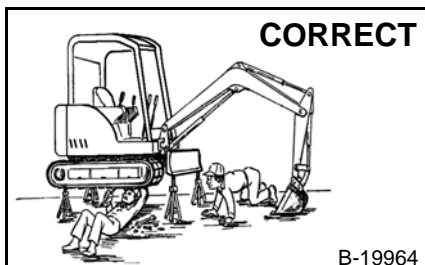


B-19964

 - ⚠ Use the correct procedure to lift and support the excavator.

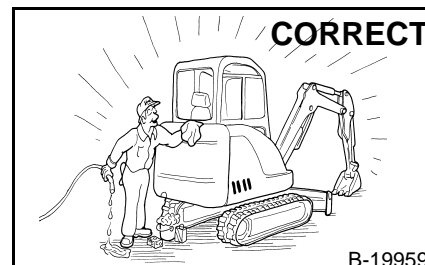


B-19959

 - ⚠ Cleaning and maintenance are required daily.

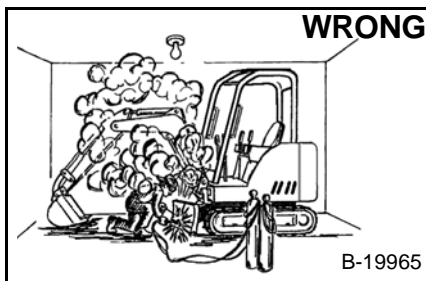


B-19965

 - ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.

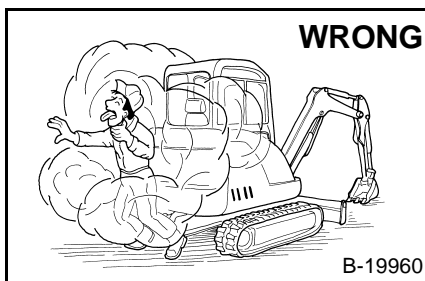


B-19960

 - ⚠ Vent exhaust to outside when engine must be run for service.
- ⚠ Exhaust system must be tightly sealed. Exhaust fumes can kill without warning.

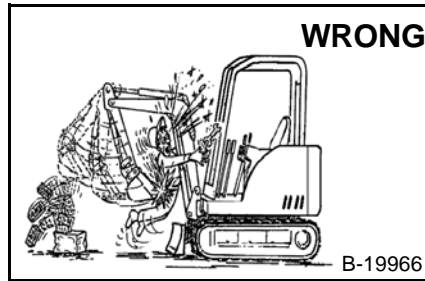


B-19966

 - ⚠ Always lower the bucket and blade to the ground before doing any maintenance.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

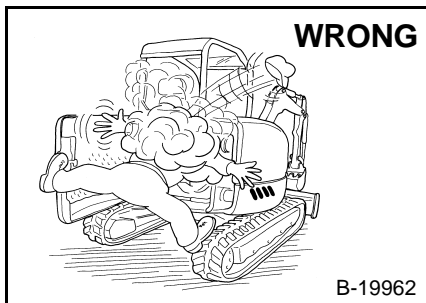


B-19962

 - ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking, or when near open flame.

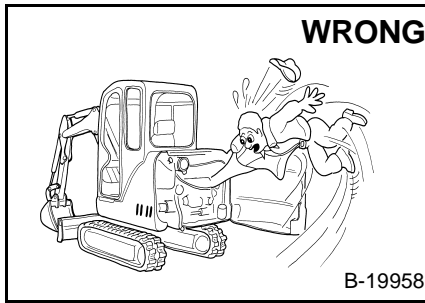

B-19958

 - ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protections approved for type of welding.
- ⚠ Keep tailgate closed except for service. Close and latch tailgate before operating the excavator.

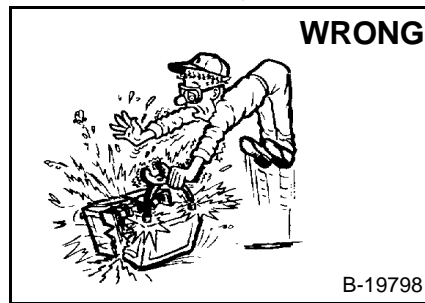

B-19798

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact.
- ⚠ Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW28-0805

ALPHABETICAL INDEX

ACCESSORY DRIVE BELT	10-01	EXCAVATOR STORAGE AND RETURN TO SERVICE	10-01
AIR CLEANER	60-01	EXPANSION VALVE	70-01
AIR CLEANER SERVICE	10-01	FAN	60-01
AIR CONDITIONING SYSTEM FLOW	70-01	FLOORMAT AND FLOOR PANEL	40-01
ALTERNATOR	50-01	FUEL LEVEL SENDER	50-01
ANGLE BLADE	30-01	FUEL SYSTEM.....	10-01, 60-01
ANGLE BLADE ASSEMBLY	30-01	FUEL TANK	40-01
ANGLE BLADE CUTTING EDGE	30-01	FLYWHEEL AND HOUSING	60-01
ANGLE BLADE CYLINDER	20-01		
ANGLE BLADE VALVE	20-01		
ARM	40-01	HEATER COIL	70-01
ARM CYLINDER	20-01	HEATER VALVE	70-01
		HORN	40-01
BATTERY	50-01	HYDRAULIC CONTROL VALVE	20-01
BLADE	30-01	HYDRAULIC CONNECTION SPECIFICATIONS	SPEC-01
BLADE CONTROL	40-01	HYDRAULIC FLUID SPECIFICATIONS.....	SPEC-01
BLADE CYLINDER	20-01	HYDRAULIC FILTER	20-01
BLOWER FAN	70-01	HYDRAULIC PUMP	20-01
BOOM	40-01	HYDRAULIC PUMP START-UP	20-01
BOOM CYLINDER	20-01	HYDRAULIC RESERVOIR.....	20-01
BOOM SWING CYLINDER.....	20-01	HYDRAULIC SYSTEM	10-01
BOOM SWING LOCK VALVE	20-01	HYDRAULIC SYSTEM INFORMATION	20-01
BOOM SWING PEDAL	20-01	HYDRAULIC X-CHANGE VALVE	20-01
BUCKET	40-01		
BUCKET CYLINDER	20-01	LEFT CONTROL LEVER (JOYSTICK)	20-01
		LEFT CONSOLE	40-01
CAB.....	40-01	LIFTING AND BLOCKING THE EXCAVATOR	10-01
CAMSHAFT AND TIMING GEARS.....	60-01	LIFTING THE EXCAVATOR	10-01
CANOPY	40-01	LIGHTS.....	50-01
CASE DRAIN FILTER	20-01	LUBRICATING THE EXCAVATOR	10-01
COMPRESSOR	70-01	LUBRICATION SYSTEM	60-01
CONDENSOR	70-01		
CONVERSIONS	SPEC-01	MAGNETIC LOCKOUT SENSOR	50-01
CONTROL PATTERN SELECTOR VALVE	20-01	MAIN RELIEF VALVE	20-01
CRANKSHAFT AND PISTONS	60-01	MANIFOLD ASSEMBLY/ACCUMULATOR	20-01
CROSS PORT RELIEF VALVES	20-01		
CYLINDER HEAD	60-01	OIL COOLER.....	20-01
		OPERATOR CAB (ROPS/TOPS)	10-01
DIAGNOSTICS SERVICE CODES.....	50-01		
DIRECT TO TANK VALVE	20-01	PIVOT PINS	10-01
		PORT RELIEF VALVES.....	20-01
ELECTRICAL SYSTEM INFORMATION	50-01	PRESSURE REDUCING VALVE.....	20-01
ENGINE COOLING SYSTEM.....	10-01, 60-01		
ENGINE INFORMATION	60-01	RECEIVER/DRIER	70-01
ENGINE LUBRICATION SYSTEM.....	10-01	REGULAR MAINTENANCE	70-01
ENGINE SPEED CONTROL	60-01	RIGHT CONTROL LEVER (JOYSTICK)	20-01
EVAPORATOR COIL	70-01	RIGHT CONSOLE	40-01
EVAPORATOR/HEATER UNIT	70-01	RIGHT SIDE COVER	10-01, 40-01
EVAPORATOR SPECIFICATIONS	SPEC-01		

Continued On Next Page

ALPHABETICAL INDEX (CONT'D)

SAFETY	70-01
SEAT AND SEAT MOUNT	40-01
SEAT BELT	10-01
SERVICE SCHEDULE	10-01
SPARK ARRESTOR MUFFLER	10-01, 60-01
STARTER	50-01
STOPPING THE ENGINE AND LEAVING THE EXCAVATOR	10-01
SWING CIRCLE GEAR	30-01
SWING FRAME	40-01
SWING MOTOR	20-01
SWING MOTOR DRIVE CARRIER.....	20-01
SWIVEL JOINT	20-01
SYSTEM CHARGING AND RECLAMATION.....	70-01
TAILGATE	10-01, 40-01
THERMOSTAT	70-01
TORQUE SPECIFICATIONS FOR BOLTS.....	SPEC-01
TRACK FRAME COMPONENTS	30-01
TRANSPORTING THE EXCAVATOR ON A TRAILER.....	10-01
TRAVEL CONTROL VALVE	20-01
TRAVEL LEVER/PEDALS	40-01
TRAVEL MOTOR.....	10-01, 20-01
TROUBLESHOOTING.....	70-01
UPPERSTRUCTURE	40-01
UPPERSTRUCTURE SLEW LOCK	10-01, 40-01
X-CHANGE	40-01
X-CHANGE (HYDRAULIC).....	40-01

CONTENTS

FOREWORD.....	III
SAFETY INSTRUCTIONS	V
SERIAL NUMBER LOCATIONS	IX
DELIVERY REPORT.....	X
EXCAVATOR IDENTIFICATION	XI
SAFETY AND MAINTENANCE.....	10-01
HYDRAULIC SYSTEM	20-01
UNDERCARRIAGE.....	30-01
UPPERSTRUCTURE & SWING SECTION	40-01
ELECTRICAL SYSTEM AND ANALYSIS	50-01
ENGINE SERVICE	60-01
HEATING, VENTILATION, AIR CONDITIONING	70-01
SPECIFICATIONS.....	SPEC-01

**SAFETY AND
MAINTENANCE**

**HYDRAULIC
SYSTEM**

UNDERCARRIAGE

**UPPERSTRUCTURE
& SWING
SECTION**

**ELECTRICAL
SYSTEM AND
ANALYSIS**

**ENGINE
SERVICE**

HVAC

 
SPECIFICATIONS

FOREWORD


This manual is for the Bobcat Hydraulic Excavator mechanic. It provides necessary servicing and adjustment procedures for the hydraulic excavator and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

A general inspection of the following items must be made after the hydraulic excavator has had service or repair:


1. Check that the ROPS/TOPS/FOPS is in good condition and is not modified.

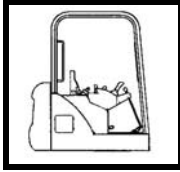

 
2. Check that ROPS/TOPS mounting hardware is tightened and is Bobcat approved.

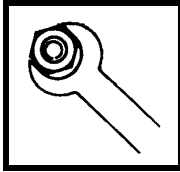

 3. The seat belt must be correctly installed, functional and in good condition.

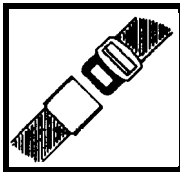

 
4. Inspect for loose or broken parts or connections.

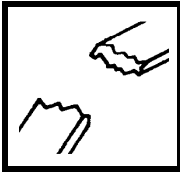


5. Machine signs must be legible and in the correct location.



 
6. Steering levers, control levers and foot pedals must return to neutral. Check that foot pedals lock and control lever locks are in working order.

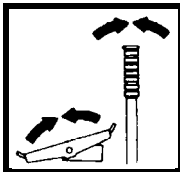

 
7. Inspect the air cleaner for damage or leaks. Check the condition of the element.

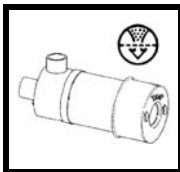

 
8. Check the electrical charging system.

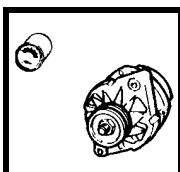

 
9. Safety treads must be in good condition.

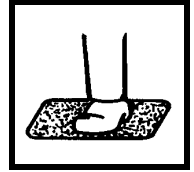

 
10. Check for correct function of indicator lamps (Optional on some models).

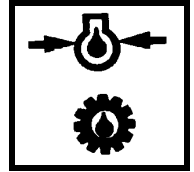

 
11. Check hydraulic fluid level, engine oil level and fuel supply.

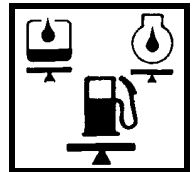

 
12. Inspect for fuel, oil or hydraulic fluid leaks.

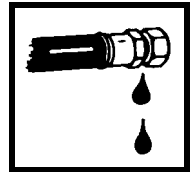

 
13. Lubricate the excavator.

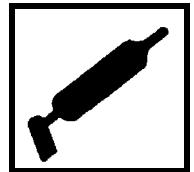

 14. Check the condition of the battery and cables.

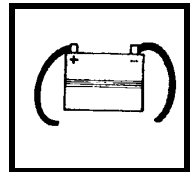

 Recommend to the owner that all necessary corrections be made before the machine is returned to service.

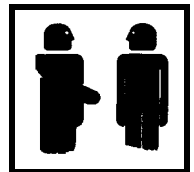

**Thank you very much for
your reading. Please Click
Here. Then Get COMPLETE
MANUAL. NO WAITING**



NOTE:

**If there is no response to
click on the link above,
please download the PDF
document first and then
click on it.**