 


**Bobcat®**

# Service Manual

**S/N 528711001 & Above  
S/N 528811001 & Above  
S/N 538711001 & Above  
S/N 538811001 & Above**

**Mini Track Loader**

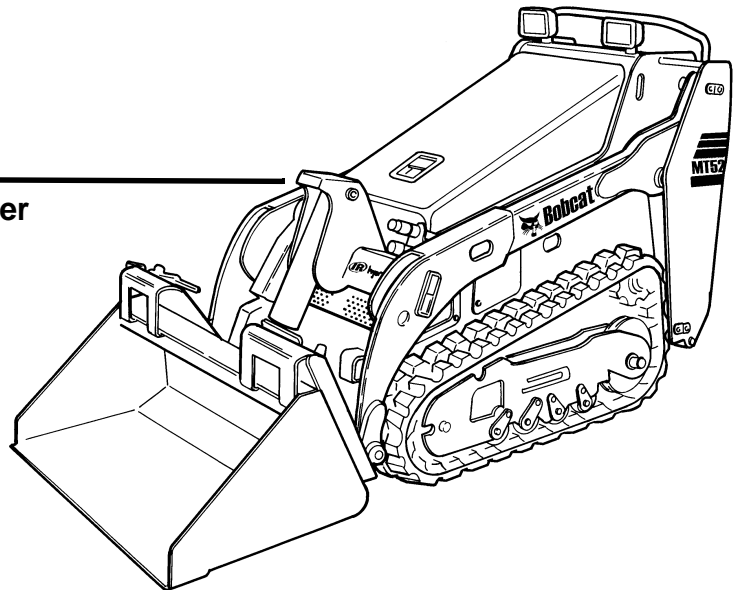

# MAINTENANCE SAFETY



## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

### CORRECT



B-10731a

- ⚠ Never service the Bobcat Mini Track Loader without instructions.



**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

 
### WRONG



B-23041

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.


### WRONG

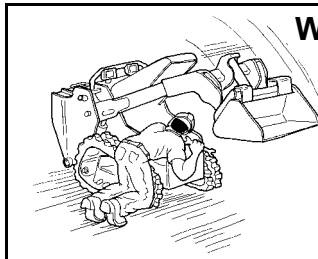

B-23035

- ⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.


### WRONG

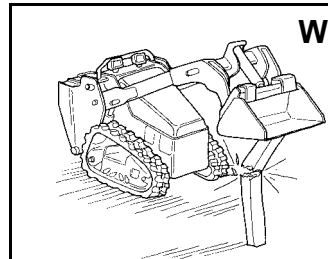 

B-23036

- ⚠ Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.


### WRONG

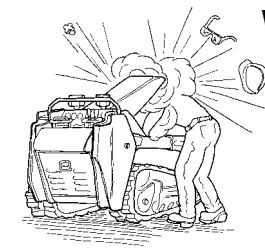 

B-23039

- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust loader with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

### WRONG

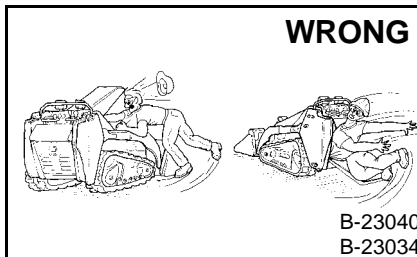 

B-23040  
B-23034

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep rear door closed except for service. Close and latch door before operating the loader.

### WRONG



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

## ALPHABETICAL INDEX

AIR CLEANER .....	70-01	HYDROSTATIC CONTROLS	
AIR CLEANER SERVICE .....	10-01	(S/N 528712700 & ABOVE,	
ALTERNATOR .....	60-01	S/N 528811150 & ABOVE,	
		S/N 538712500 & ABOVE) .....	30-01
BATTERY .....	60-01	HYDROSTATIC PUMP .....	30-01
BOB-TACH.....	10-01, 50-01	HYDROSTATIC SYSTEM INFORMATION.....	30-01
BOTTOM ACCESS PANEL .....	50-01		
		INSTRUMENT PANEL.....	50-01
CONTROLS .....	10-01	LOADER SPECIFICATIONS .....	SPEC-01
CONVERSIONS .....	SPEC-01	LIFT ARM .....	50-01
CYLINDER (LIFT) .....	20-01	LIFT ARM SUPPORT DEVICE.....	10-01
CYLINDER (TILT) .....	20-01	LIFTING AND BLOCKING THE LOADER.....	10-01
		LUBRICATION OF THE BOBCAT LOADER .....	10-01
DRIVE BELT .....	30-01		
DRIVE COMPONENTS .....	40-01	MAIN RELIEF VALVE .....	20-01
DRIVE MOTOR.....	30-01	MUFFLER.....	70-01
ELECTRICAL ATTACHMENT CONTROL REF. ....	60-01	NEUTRAL START SENSOR	
ELECTRICAL SYSTEM .....	10-01	(S/N 528711001-528712429,	
ELECTRICAL SYSTEM INFORMATION .....	60-01	S/N 528811001-528811121,	
ENGINE (S/N 528711001-528712699,		S/N 538711001-528712295) .....	60-01
S/N 528811001-528811149,		NEUTRAL START SENSOR	
S/N 538711001-528712499) .....	70-01	(S/N 528712430 & ABOVE,	
ENGINE (S/N 528712700 & ABOVE,		S/N 528811122 & ABOVE,	
S/N 528811150 & ABOVE,		S/N 538712296 & ABOVE) .....	60-01
S/N 538712500 & ABOVE) .....	70-01		
ENGINE COMPONENTS AND TESTING .....	70-01	PARKING BRAKE.....	40-01
ENGINE COOLING SYSTEM.....	10-01	PORT RELIEF VALVES.....	20-01
ENGINE INFORMATION AND TESTING .....	70-01		
ENGINE LUBRICATION SYSTEM.....	10-01	RADIATOR .....	70-01
ENGINE SPECIFICATIONS.....	SPEC-01	RECONDITIONING THE ENGINE .....	70-01
ENGINE SPEED CONTROL .....	70-01	REVERSE STOP PANEL .....	50-01
		RIDE-ON PLATFORM .....	50-01
FLYWHEEL.....	70-01		
FUEL SYSTEM .....	10-01	SERVICE SCHEDULE .....	10-01
FUEL TANK.....	50-01	SPARK ARRESTOR MUFFLER.....	10-01
		STARTER .....	60-01
GRAB BAR .....	50-01		
		TAILGATE.....	50-01
HOOD .....	50-01	TORQUE SPECIFICATIONS FOR BOLTS .....	SPEC-01
HYDRAULIC CONNECTION SPECS.....	SPEC-01	TOWING THE LOADER .....	10-01
HYDRAULIC CONTROL VALVE .....	20-01	TRANSPORTING THE BOBCAT LOADER.....	10-01
HYDRAULIC FILTER .....	20-01		
HYDRAULIC FLUID RESERVOIR.....	20-01		
HYDRAULIC FLUID SPECIFICATIONS .....	SPEC-01		
HYDRAULIC OIL COOLER .....	20-01		
HYD. GEAR PUMP MOUNTING BRACKET .....	70-01		
HYDRAULIC PUMP.....	20-01		
HYDRAULIC/HYDROSTATIC SYSTEM .....	10-01		
HYDRAULIC SYSTEM INFORMATION.....	20-01		
HYDROSTATIC CONTROLS			
(S/N 528711001-528712699,			
S/N 528811001-528811149,			
S/N 538711001-528712499) .....	30-01		

# CONTENTS

FOREWORD.....	III
SAFETY INSTRUCTIONS .....	V
SERIAL NUMBER LOCATION .....	IX
DELIVERY REPORT.....	IX
BOBCAT LOADER IDENTIFICATION.....	X
SAFETY AND MAINTENANCE.....	10-01
HYDRAULIC SYSTEM .....	20-01
HYDROSTATIC SYSTEM.....	30-01
DRIVE SYSTEM .....	40-01
MAIN FRAME .....	50-01
ELECTRICAL SYSTEM & ANALYSIS.....	60-01
ENGINE SERVICE .....	70-01
SPECIFICATIONS.....	SPEC-01

**SAFETY &  
MAINTENANCE**

**HYDRAULIC  
SYSTEM**

**HYDROSTATIC  
SYSTEM**

**DRIVE  
SYSTEM**

**MAIN FRAME**

**ELECTRICAL  
SYSTEM &  
ANALYSIS**

 
 

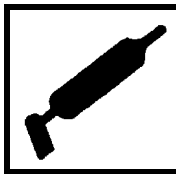 
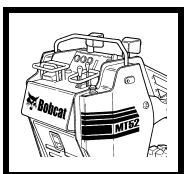 
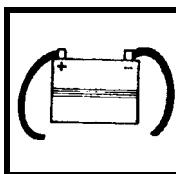 

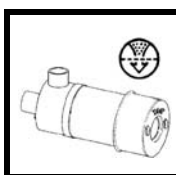 
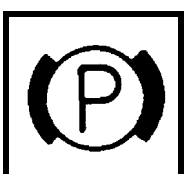 
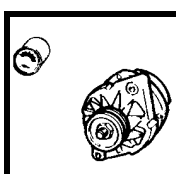 
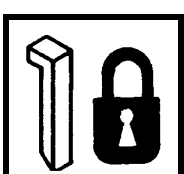 
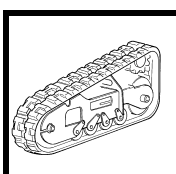 
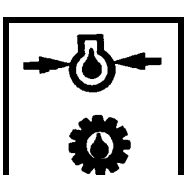 

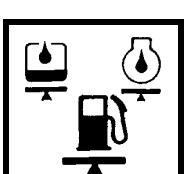 
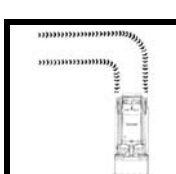 
**ENGINE  
SERVICE**

**SPECIFICATIONS**

 
# FOREWORD

This manual is for the Bobcat loader mechanic. It provides necessary servicing and adjustment procedures for the Bobcat Mini loader and its component parts and systems. Refer to the Operation & Maintenance manual for operating instructions, Starting procedure, daily checks, etc.


A general inspection of the following items must be made after the loader has had service or repair:

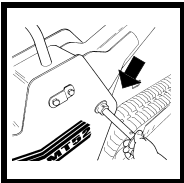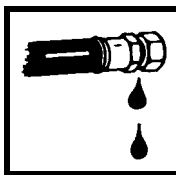- |   |   |  |   |
|---|---|--|---|
| 1. Check lift arm support device, replace if damaged. (Stored Position)           |    | 9. Inspect for fuel, oil or hydraulic fluid leaks.                                   |    |
| 2. Machine signs must be legible and in the correct location.                     |    | 10. Lubricate the loader.  |    |
| 3. Controls must return to neutral.   |    | 11. Check the condition of the battery and cables.                                   |    |
| 4. (Optional) Check for correct function of the work lights                       |   | 12. Inspect the air cleaner for damage or leaks. Check the condition of the element. |   |
| 5. The parking brake must function correctly.                                     |  | 13. Check the electrical charging system.  |  |
| 6. Bob-Tach wedges and linkages must function correctly and be in good condition. |  | 14. Check tracks for wear and pressure.  |  |
| 7. Check for correct function of indicator lamps (Optional on some models).       |  | 15. Inspect for loose or broken parts or connections.                                |  |
| 8. Check hydraulic fluid level, engine oil level and fuel supply.                 |  | 16. Operate the loader and check all functions.                                      |  |


17. Check for any field modification not completed.

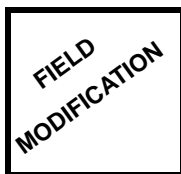

 18. Check for correct function of lift/tilt lockouts, neutral start interlocks and reverse stop panel.

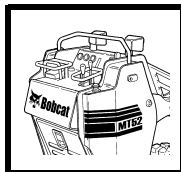

 Recommend to the owner that all necessary corrections be made before the machine is returned to service.

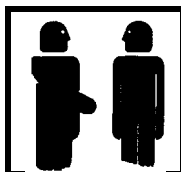

**CALIFORNIA  
PROPOSITION 65 WARNING**

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

**Thank you very much  
for your reading.**

**Please click here to buy  
After you pay.**

**Then, you can  
download the complete  
manual instantly.  
No waiting.**