

Product: MULTI TERRAIN LOADER

Model: 297D2 XHP MULTI TERRAIN LOADER HP2

Configuration: 297D2 & 297D2 XHP Multi Terrain Loader HP200001-UP (MACHINE) POWERED BY C3.8 Engine

Disassembly and Assembly C3.8 Engines for Caterpillar Built Machines

Media Number -UENR0129-08

Publication Date -01/09/2015

Date Updated -19/05/2016

i07500660

Diesel Particulate Filter - Remove and Install

SMCS - 108F-010

Removal Procedure



Wear goggles, gloves, protective clothing, and a National Institute for Occupational Safety and Health (NIOSH) approved P95 or N95 half-face respirator when handling a used Diesel Particulate Filter or Catalytic Converter Muffler. Failure to do so could result in personal injury.



The muffler, catalytic converter/muffler, and diesel particulate filter will become extremely hot during engine operation. A hot muffler, catalytic converter/muffler and diesel particulate filter can cause serious burns. Allow adequate cooling time before working on or near the muffler, catalytic converter/muffler and diesel particulate filter.

NOTICE

Do not strike any part of the assembly of the Diesel Particulate Filter (DPF). Do not allow any object to contact the internal element of the

DPF. If the internal element of the DPF becomes damaged, the assembly must be replaced.

Start By:

- a. Remove the engine.

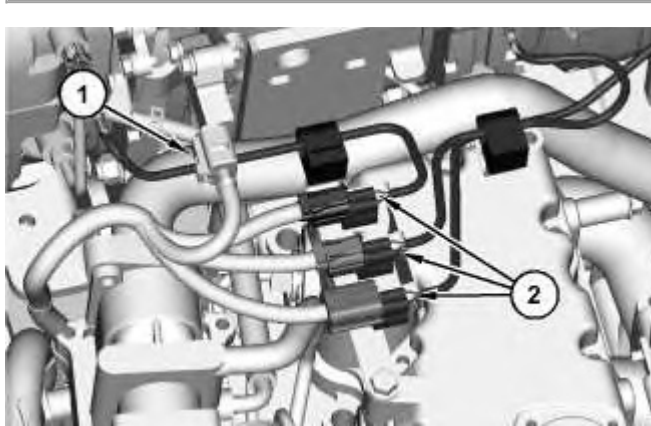


Illustration 1

g06048047

1. Disconnect harness assembly (1) and harness assemblies (2). Remove the connecting hardware.



Illustration 2

g02893984

2. Remove bolts (3).
-



Illustration 3

g02893982

3. Remove bolts (4). Repeat this step for the opposite side.



Illustration 4

g02894044

4. Use two people to remove diesel particulate filter (5).

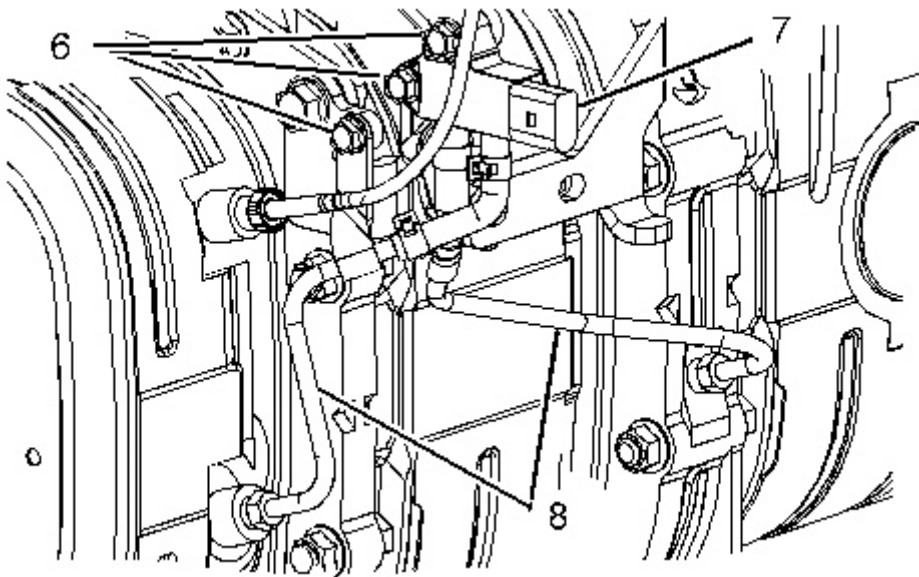


Illustration 5

g02920386

**Thank you very much
for your reading.**

**Please click here to buy
After you pay.**

**Then, you can
download the complete
manual instantly.
No waiting.**